

Samsung GALAXY Note[®] 10.1 2014 Edition

T A B L E T

User Manual

Please read this manual before operating your device
and keep it for future reference.



Legal Notices

Warning: This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating there to (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: <http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

SAFE™ (Samsung For Enterprise)

SAFE™: “SAFE™” (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung’s own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung’s SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE “SAMSUNG ENTITIES”) EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user.

For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphones and mobile devices are sold. [091714]

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive
Richardson, TX 75082

1-800-SAMSUNG (726-7864)
1-888-987-HELP (4357)

Internet Address:

www.samsung.com

©2014 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Tablet?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: www.samsung.com/us/support

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Hangouts, Picasa, Play Newsstand, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Online Legal Information

The online version of the Health/Safety and Warranty guide for your device can be found at: www.samsung.com.

Table of Contents

Getting Started	1	S Note	48
Front View	2	S Voice	49
Back View	3	Samsung Apps / GALAXY Apps	50
Assemble Your Device	4	Scrapbook	51
Set Up Your Device	6	Video Player	52
Set Up Accounts on Your Device	7	WatchON	53
Know Your Device	8	World Clock	54
Home Screen.....	9	Settings	55
Status Bar	12	How to Use Settings	56
Navigation.....	13	Wi-Fi and Wi-Fi Direct	57
Notification Panel	14	Bluetooth	59
Multi Window	15	Tethering and Mobile HotSpot	61
S Pen	17	Airplane Mode	63
Entering Text	20	Download Booster	64
Applications	21	Data Usage.....	65
Apps Screen	22	Location Services	66
Google Applications	24	Default Messaging App	67
T-Mobile Applications.....	26	Printing.....	68
Other Applications	27	Mobile Networks.....	69
Action Memo.....	29	Virtual Private Networks (VPN)	70
Alarm	30	Nearby Devices.....	71
Calculator.....	31	Screen Mirroring.....	72
Calendar.....	32	Sound Settings.....	73
Camera and Video.....	33	Display Settings	75
Contacts.....	36	Multi Window Settings	77
Email.....	39	Lock Screen	78
Gallery.....	40	Wallpaper Settings.....	79
Internet.....	42	Font.....	80
Messages	44	Notification Panel Settings	81
Music Player.....	46	Accessibility.....	82
My Files.....	47	Blocking Mode	84
		Language and Input Settings.....	85

Voice Control.....	87
S Pen Settings.....	88
Motions.....	89
Palm Motion.....	90
Smart Screen.....	91
Accounts.....	92
Cloud.....	93
Backup and Reset.....	94
Date and Time Settings.....	95
Accessories.....	96
Application Manager.....	97
Default Applications.....	99
Users.....	100
Battery.....	101
Power Saving.....	102
Storage.....	103
Security.....	105
About Your Device.....	107

Getting Started

 
Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

Front View



- **Back key:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Front camera:** Take self-portraits and record videos of yourself.
- **Home key:** Tap to return to the Home screen.
- **Menu key:** Tap to display menu options and hold to search. **microSD card slot:** Install an optional memory card (not included) for storage of files.
- **Power/Lock key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane Mode, Emergency Mode, and to Mute, Vibrate, and Sound modes.
- **Proximity and gesture sensors:** Detects the presence of objects near the device.
- **SIM card slot:** Install your SIM card here.
- **Volume:** Press to adjust the volume of your device's sounds and audio.

Back View

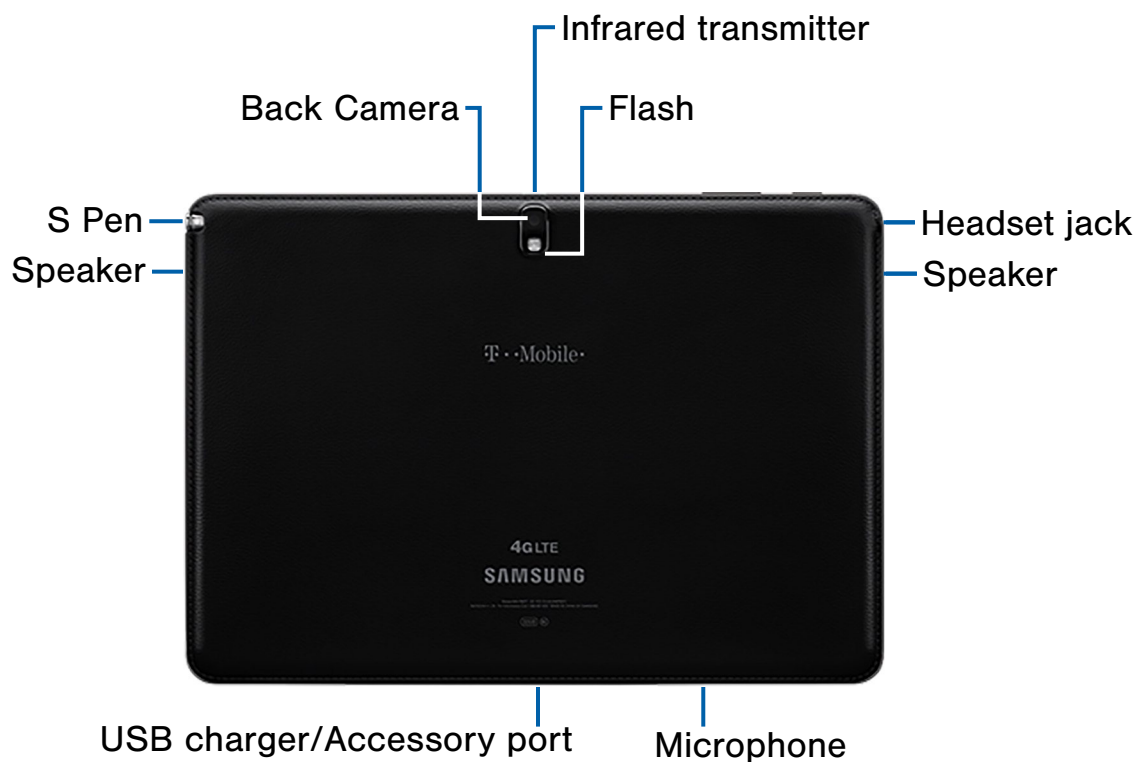

- **Back camera:** Take pictures and record videos.
- **Flash:** Illuminate subjects in low-light environments when taking a photo or recording video.
- **Headset jack:** Connect an optional headset (not included).
- **Infrared transmitter:** Controls external devices using infrared light.
- **Microphone:** Records audio and detects voice commands.
- **S Pen:** A stylus that assists you in performing various functions.
- **Speaker:** Plays music, and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

 
Assemble Your Device

Prior to use, install the SIM card and optional memory card (not included), and charge the battery.

Install the SIM Card

1. When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card will be loaded with your subscription details, such as your PIN, available optional services, and other features.

Warning: Please be careful when handling the SIM card to avoid damaging it. Keep all SIM cards out of reach of small children.

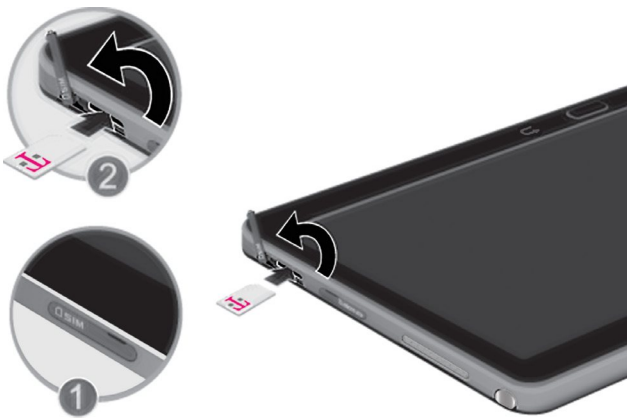

1. Open the SIM card cover.
2. Carefully slide the SIM card into the SIM card slot until the card locks into place.

Make sure that the card's gold contacts face into the device and that the upper-left angled corner of the card is positioned as shown.

Caution: If the card is not inserted correctly, the device will not detect the SIM card. Re-orient the card and place it back into the slot if the SIM is not detected.

Install a Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [Install a Memory Card](#).

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

The battery comes partially charged. A fully discharged battery requires up to four hours of charge time. You can use the device while charging.

Caution: Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.



1. Insert the USB cable into the port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.



3. When charging is complete, unplug the charging head from the outlet and remove the USB cable from the device.

Caution: Failure to unplug the wall charger before you remove the battery, can cause damage to the device.

When to Charge the Battery

When the battery is weak and only a few minutes of operation remain, the battery icon (🔋) blinks and the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, view the battery charge indicator located in the upper-right corner of your device's display. A solid color (🔋) indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see [Battery](#).

Set Up Your Device

Turn Your Device On or Off

Turning the Device On

- ▶ Press and hold the **Power/Lock** key until the device starts up.

Turning the Device Off

1. Press and hold the **Power/Lock** key until the Device options menu displays.
2. Tap **Power off**.

Welcome Screen

The first time you turn your device on, the Welcome Screen displays. It will guide you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi network, set up accounts, choose location services, learn about your device's features, and more.

Secure Your Device

Use your device's screen lock features to secure your device.

Lock the Device

By default, the device locks automatically when the screen times out.

- ▶ To lock the device, press the **Power/Lock** key.

Unlock the Device

The default Screen lock on your device is Swipe.

- ▶ To unlock your device, press the **Power/Lock** key or **Home** key, and then touch and drag your finger across the screen.

Set Up a Secure Screen Lock

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see [Lock Screen](#).

Set Up Accounts on Your Device



Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play Store.

When you turn on your device for the first time, set up your existing Google Account, or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Accounts** > **Add account** > **Google**.



Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account, or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

 
- From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Accounts** > **Add account** > **Samsung account**.

Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Home Screen

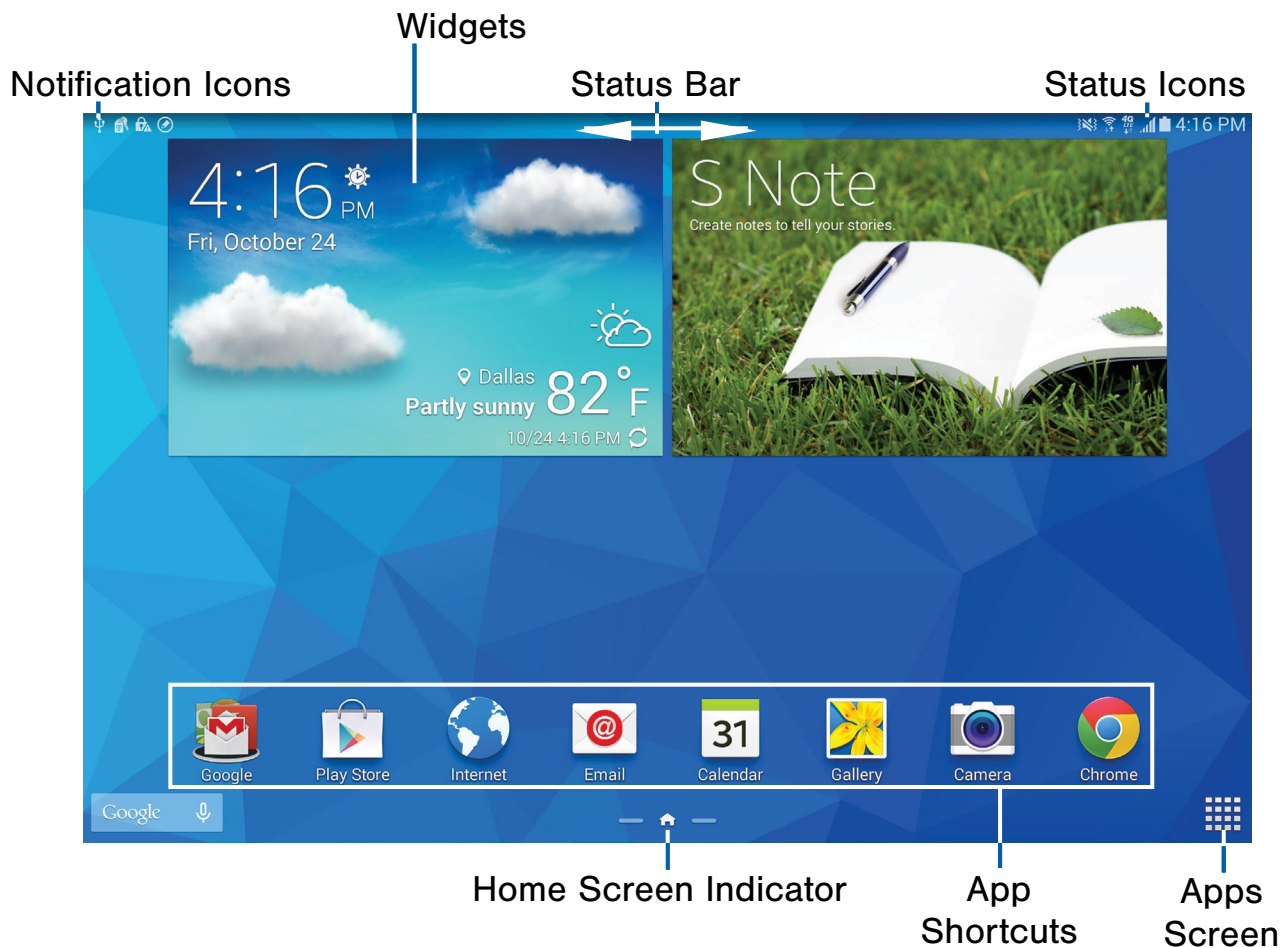




- **Apps Screen:** Allows quick access to all of your applications.
- **App Shortcuts:** Shortcuts to your favorite applications.
- **Home Screen Indicator:** Indicates which Home screen is presently displayed.
- **Notification Icons:** Display new messages and emails, notifications, available software updates, and so on.
- **Status Bar:** Displays device status icons (right) and notification icons (left).
- **Status Icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widgets:** Self-contained applications that run on the Home screen (not shortcuts).

The Home screen is the starting point for using your device.

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens


Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.
2. Use these options to manage screens:
 - **Add a screen:** Scroll to the end of the screens, and then tap  **Add**.
 - **Remove a screen:** Touch and hold on a screen, and then drag it to the  **Remove**.
 - **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home Key.
 - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.


App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen and release it.

Remove a Shortcut


1. Touch and hold a shortcut to release it.
2. Drag the icon to  **Remove** and release it.

Note: Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Add a Widget to the Home Screen

1. From a Home screen, tap  **Apps**.
2. Tap the **Widgets** tab.
3. Touch and hold a widget, drag it to a Home screen and release it.

Remove a Widget


1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to the **Remove** icon and release it.

Note: Removing a widget does not delete the widget, it just removes the widget from the Home screen.

Folders


Place folders on the Home screen to organize items.

Adding Folders

1. From a Home screen, touch and hold an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
3. Enter a folder name, and tap **OK**.

A folder will be created with the shortcut(s) inside.

Using Folders

1. Tap the folder to open it and access the shortcuts inside.
2. To add shortcuts to the folder, touch and hold the shortcut, and then drag it onto the folder and release.
3. To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Remove** and release.

Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture, or choose from preloaded wallpapers.

1. Touch and hold an empty space on the screen.
2. Tap **Set wallpaper**, and then choose **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose a location for your image:
 - **Gallery**: Chose images from the Gallery app.
 - **Live wallpapers**: Choose wallpapers that move.
 - **Wallpapers**: Choose from preloaded images.
 - **Travel wallpaper**: Display recommended destinations. (Lock screen only.)
 - **Photos**: Choose from your Google Photos account. (Home and lock screens only.)
4. Choose a wallpaper, and tap **Set wallpaper**.

Status Bar

The Status Bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

Status Icons



Battery is fully charged.



Battery is low. The yellow area turns red as the charge level becomes critical.



Battery is charging.



Vibrate mode is enabled.



Mute mode is enabled.



The device is connected to a 4G LTE wireless network.



Signal strength.



Wi-Fi is active.



No wireless network is available.

Notification Icons



New email has arrived



New Gmail has arrived.



New voicemail message has been received.



New text or multimedia message has arrived.



Download of a file or app is in progress.



File is being uploaded or sent.



Location service (GPS) is active.



App updates are available from the Google Play Store.



App updates are complete.



Keyboard is in use.



Connected to a computer using a USB cable.

Navigation

Touchscreen Navigation

Tap

Lightly tap items to select or launch them.

- Tap the on screen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture.

- Touch and hold a widget on the Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe or Slide

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

Drag

To drag, touch and hold on an item, and then move it to a new location.

 
- Drag an app shortcut to add it to a Home screen.
- Drag a widget to a place it in a new location on a Home screen.

Pinch and Spread

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Pinch the screen to zoom in or out while viewing a picture or a web page.
- Spread the screen to zoom in or out while taking a picture.

Notification Panel

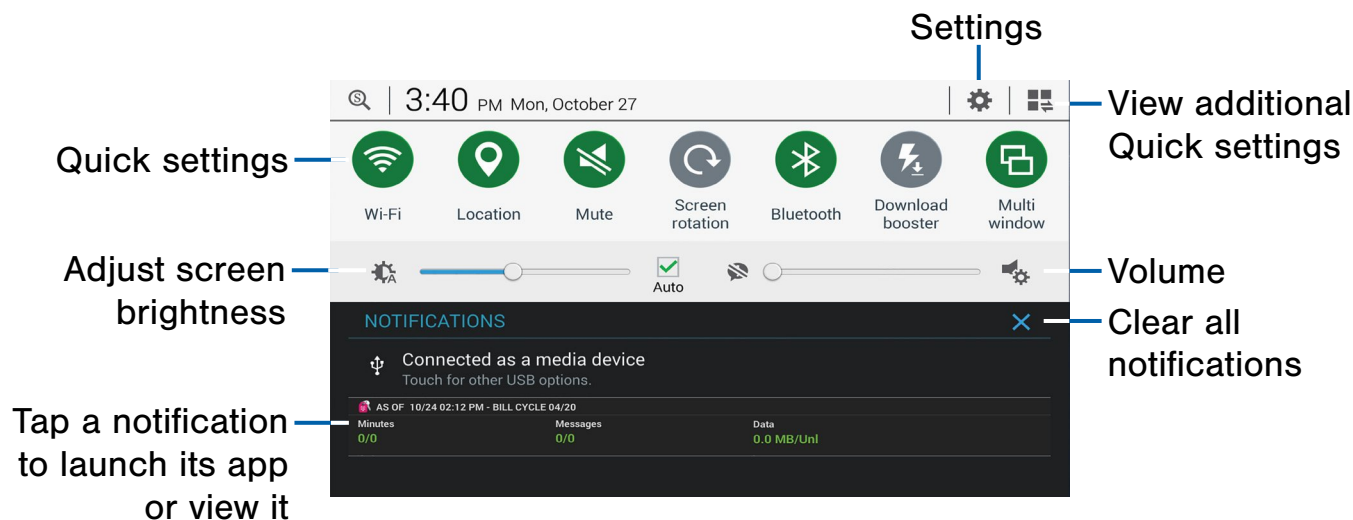

Notification icons display on the Status Bar displaying calendar events, device status, and more. For details about these notifications, open the Notification Panel.

View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
 - Tap an item to open it.
 - To clear a single notification, drag the notification left or right. Tap **X Clear all** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or press the **Back** key.

Quick Settings

In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:

- Swipe left or right across the visible icons.

 
– or –

Tap  **View all**.

Notification Panel Settings



To customize the Notification Panel, see [Notification Panel Settings](#).

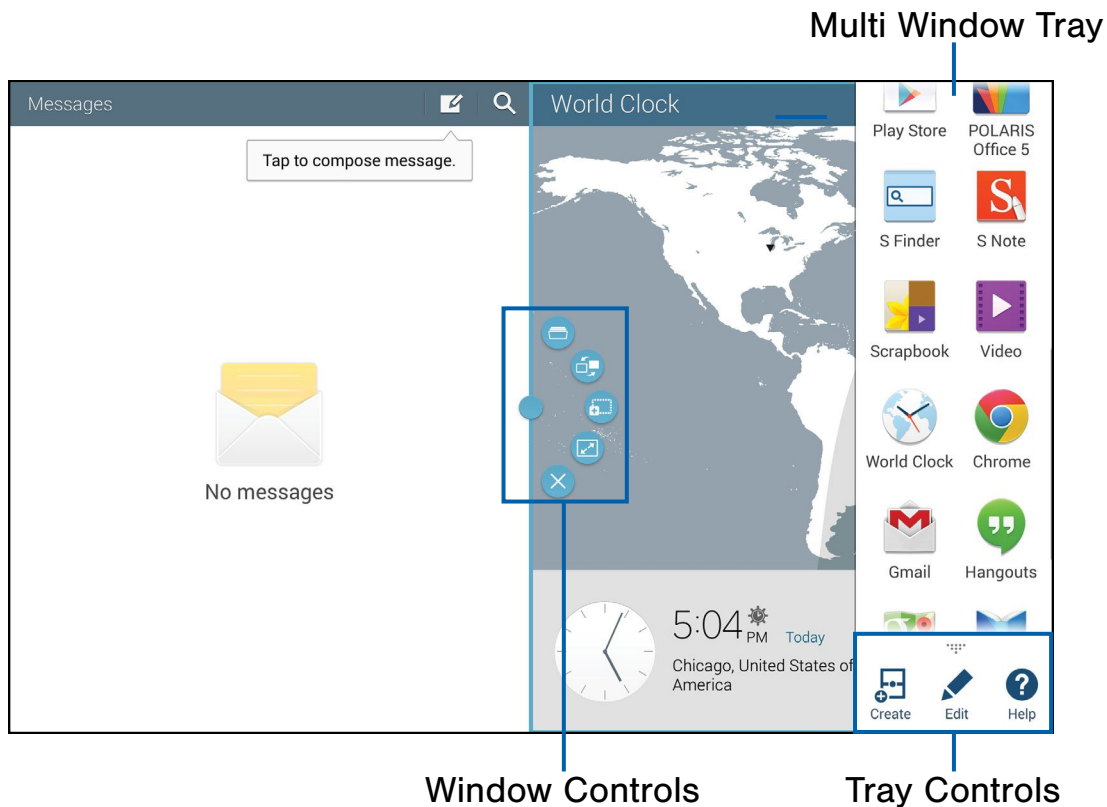Multi Window



Multitask by using multiple applications at the same time.

Activate Multi Window

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Multi window**.
2. Tap **ON/OFF** to activate.
 - Tap **Open in multi window view** to automatically view content in Multi window when you open files from My Files or Video player, or attachments from email.

Tip: You can also activate Multi window from the Notification Panel. For more information, see [Notification Panel](#).

Using Multi Window


After enabling Multi Window, you can use it to run multiple apps at the same time.

Note: Only apps located on the Multi Window tray can be used together. Additional Multi Window apps are available from the Google Play Store.

The apps display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.

1. Swipe from the right edge of the screen toward the center to display the Multi window tray. (After a few seconds, the tray will be hidden again.)
2. Touch and drag apps off of the tray and release.

Window Controls

Select an application window and tap  **Border button** in the middle of the window border.

Control Buttons



Open a recently-used application in the selected window.



Switch locations between Multi window applications.



Share items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.



Maximize the application.



Close the application.



Customize Multi Window

You can customize Multi window to suit your preferences.

Create a Window Group

If you use certain apps together in Multi window often, you can create a window group to quickly display the two apps in Multi window.

The window group will be stored in the Multi window tray, so you can choose it any time to display the two apps.



1. Swipe the right edge of the screen toward the center to display the Multi window tray.
2. Tap  **Tray Controls** >  **Create**.

Change the Order of Apps in the Multi Window Tray

1. Swipe the right edge of the screen toward the center to display the Multi window tray.
2. Tap and hold an app, drag it to a new position in the tray and then drop it.

Choose Apps to Display in the Multi Window Tray

You can choose the apps you want to display in the Multi window tray.

 
1. Swipe the right edge of the screen toward the center to display the Multi window tray.
2. Tap  **Tray Controls** >  **Edit** for options:
 - To remove an app from the tray, tap and drag it off of the tray and place it in the storage area.
 - To add an app to the tray, tap and drag it from the storage area to the tray.
 - To relocate an app, tap and drag it to a new location.

Multi Window Settings

To customize Multi Window, see [Multi Window Settings](#).

S Pen


The S Pen is a stylus that assists you in performing different functions.

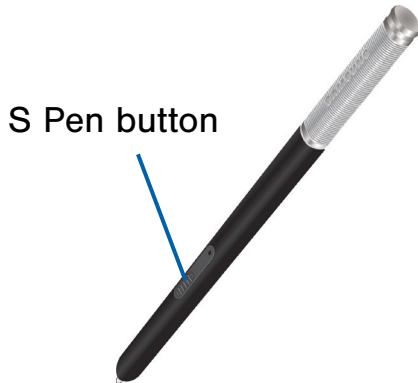

Remove S Pen


The S Pen stores inside your device for convenient access.

 - Slide the S Pen from your device using the notch on the end of the S Pen.

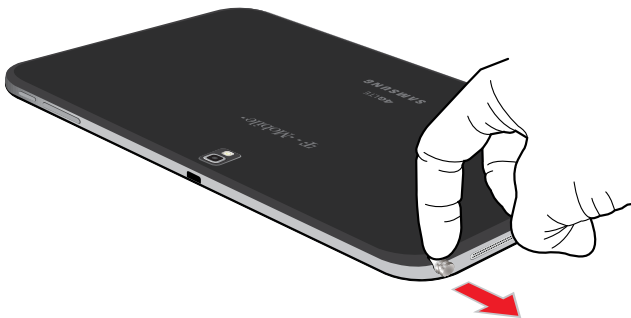

Air Command

 
Air command allows you to quickly activate frequently used applications or perform actions.

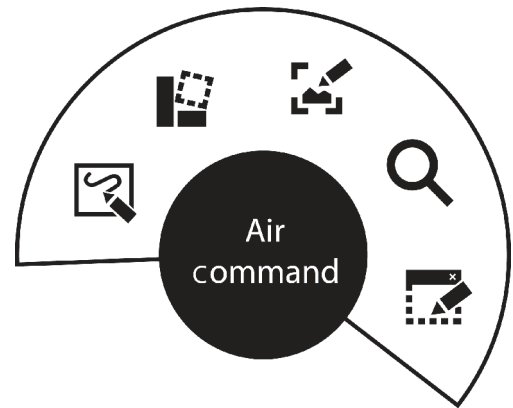

- To launch the Air command menu, remove the S Pen from the S Pen slot, hold the S Pen near the screen so that the pointer appears, and press the **S Pen** button once.
 - **Action Memo:** Launch a Quick Note and link it to actions.
 - **Scrapbooker:** Draw around an area of the screen to collect it in the Scrapbook app.
 - **Screen Write:** Capture screenshots and write or draw on them.
 - **S Finder:** Search device contents.
 - **Pen window:** Outline a window on the screen, to quickly access selected applications.

Action Memo

An Action Memo is a Quick Note that is linked to actions. To open a Quick Note:

- ▶ Launch the **Air command** menu and select  **Action memo**.

– or –

Press and hold the S Pen button and double-tap the screen with the pen.




Note: You can find Action Memos in the  **Action Memo** app.

See [Action Memo](#) for more information.

Scrapbooker

The Scrapbooker feature provides a capture tool to select content on a screen. You can then add it to your Scrapbook app or share it with your contacts.


To launch the Scrapbooker tool:

1. Launch the **Air command** menu and select  **Scrapbooker**.
2. Use the S Pen to draw a circle around your content. The following options are available:
 - Tap  **Menu** to choose a category to store the image.
 - Tap  **Edit** to change the name of the image.
 - Tap **Memo** to add a note at the bottom of the image.
 - Tap **Tags** to add a tags to your image.
 - Tap **Done** to save the image to Scrapbook.
 - Tap **Cancel** to delete the image.

Screen Write

Screen Write allows you to capture a screen shot and then write notes on the screen shot.

To use Screen Write:

1. Launch the **Air command** menu and select  **Screen write**.


– or –

With the S Pen button pressed, touch and hold the S Pen on the screen until the screen border flashes.
2. The current screen is captured, and a pen tool appears. The following editing tools are provided:
 - **Pen:** Draw on the screen shot. Press the Pen icon a second time to change the pen tip, size, color, and to save presets.
 - **Eraser:** Erase the writing or drawings on the screen shot. Tap the **Eraser** icon a second time to change the size of the eraser area and to see the **Clear all** option.
 - **Crop:** Crop the screenshot. Tap the **Crop** icon a second time to change the crop shape.
 - **Undo:** Undo the last action.
 - **Redo:** Redo the last action that was undone.
3. When you are finished writing, tap:
 - **Share via** to send the image to others.
 - **Cancel** to delete the shot.
 - **Save** to save the screen shot. The screen shot is saved in the Gallery app.

S Finder

Use the S Finder to search your device for content.


To use S Finder:

1. Launch the **Air command** menu and select  **S Finder**.
2. Enter a search topic.

Pen Window

Draw a window to open an app in a small window while using other apps.

To use Image Clip:

1. Launch the **Air command** menu and select  **Pen window**.
2. Use the S Pen to draw a window.
3. Tap the app you want to open in the window. You can go back and forth between the window and main screen.

Air View

Hover the S Pen over the screen to preview content, or view information about an item on the screen.

For example:


- Hover over an email in a list to preview the message before opening it.
- Hover over a photo album to preview the contents or see a picture enlarged.
- Hover over the time line during video playback to preview and navigate to specific scenes.
- Hover over an icon or screen button to view the item's name or description.

Note: The preview function is only available when the S Pen's onscreen pointer is a solid color.

Direct Pen Input

When filling out a form field in an app (like **Name** or **Number** in Contacts), you can open a Handwriting window to allow you to write the entry with the S Pen rather than type.

To use the Handwriting window:

1. When filling out a form field, hover the S Pen over the field until the  Handwriting icon appears.
2. Tap the **Handwriting** icon. The Handwriting window appears.
3. Use the space provided in the window to write the entry by hand using the S Pen. While writing, your entries will be converted into text.

4. To edit the converted text, use the Space, and Delete icons provided. To change the position of the cursor, drag the pointer below the cursor to the desired position for editing.
5. When finished, tap **Done**.

Easy Clip

Outline and crop images on the screen, in any shape, to share or paste.

1. Press and hold the S Pen button, then draw around the image you want to clip. You can use the provided tools to edit the clip.
2. Tap the app you want to paste the image into.

 
Configure S Pen Settings

For information on configuring S Pen settings, including options for sounds and for tracking S Pen when it's not stored in your device, see [S Pen Settings](#).

Replace the S Pen Tip

You can replace the tip of the S Pen. To replace the tip:


1. Use tweezers (not included) to pull out the S Pen tip (1).
2. Insert the new pen tip on the top of the S Pen and press until it clicks in place (2).

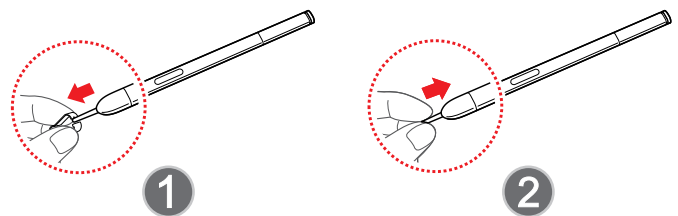

Entering Text

Using the Samsung Keyboard

 Type your text input using a QWERTY keyboard.

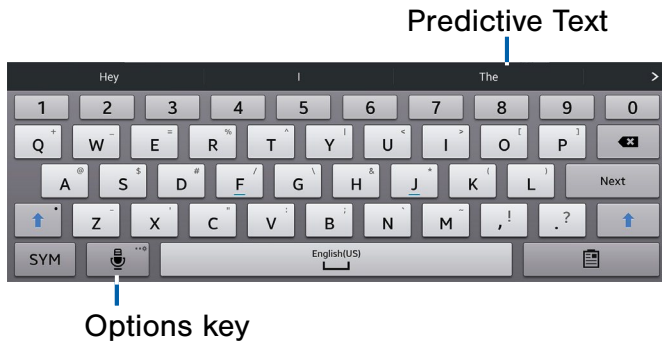



Configure the Samsung Keyboard

To customize the Samsung Keyboard, see [Samsung Keyboard Settings](#).

Using Google Voice Typing

 Instead of typing, speak your text input.

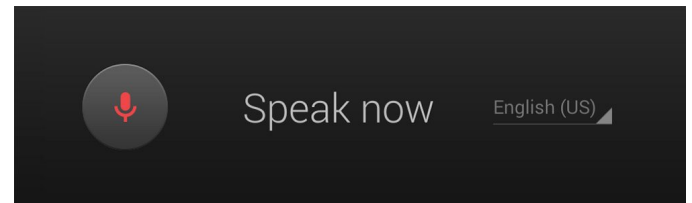

1. On the Samsung Keyboard, tap  **Google Voice Typing**.
2. Speak your text.

Configure Google Voice Typing

To customize Google Voice Typing, see [Google Voice Typing Settings](#).

Special Keys



Access the clipboard.



Tap to insert numbers and symbols.

Touch and hold the **Options** key to:



Use Google Voice Typing.



Use your handwriting to enter text.



Access keyboard settings.



Insert emoticons.



Change the layout of the keyboard.

Predictive Text

Predictive text suggests words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.

Applications

The Apps screen displays all applications installed on your device, both preloaded apps and apps you download and install yourself.


Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.

Apps Screen

The Apps screen shows all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.



Shortcuts to app can be placed on any of the Home screens. For more information, see [Add a Shortcut to a Home Screen](#).

Accessing Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.





Download and Install New Apps

Find new apps to download and install on your device:

-  **Play Store:** Download new apps from the Google Play Store. Visit play.google.com/store/apps to learn more.
-  **GALAXY Apps:** View and download Samsung apps that are optimized for use with GALAXY devices. Visit apps.samsung.com to learn more.

Uninstall or Disable Apps



You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
 - Apps that are disabled are turned off and hidden from view.
1. From a Home screen, tap  **Apps**.
 2. Tap  **Menu** > **Uninstall/disable apps**. Apps that can be uninstalled show  **Delete** on their icon.
 3. Tap  **Delete** and follow the prompts to either uninstall or disable the app.




Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.




Change the Order Apps Are Listed

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** > **View type**.
3. Tap an option:
 - **Customizable grid:** The default view, which allows you to touch and hold apps to move them from screen to screen.
 - **Alphabetical grid:** Icons are arranged in a grid, in A-Z order.

Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** > **Create folder**.
3. Enter a folder name.
4. Tap  **Add**, select apps to include in the folder, and then tap **Done**.
 - Touch a folder to view its apps. Touch an app to launch it.

Apps Screen Options

1. From a Home screen, tap  **Apps**.
2. Tap  **Menu** for these options:
 - **Edit**: Touch and hold an app icon then drag it to the **Create folder** icon to create a new folder. Drag it to **App info** to view information about this app. Or drag it to **Disable** or **Delete** to remove the app
 - **Create folder**: Create a new folder to hold the app icon.
 - **Uninstall/disable apps**: Uninstall an app that you downloaded to your device, or disable a preloaded app (preloaded apps cannot be uninstalled). Touch  **Delete** to remove or disable the selected app.
 - **View type**: Configure the apps screen.
 - **Show disabled apps**: Display disabled apps.

Google Applications

Enjoy these applications from Google.

Note: Certain applications require a Google account. Visit google.com to learn more.



Chrome

Use Google Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.

Visit google.com/chrome/browser to learn more.



Drive

Open, view, rename, and share your Google Docs and files.

Visit drive.google.com to learn more.



Gmail

Send and receive email with Gmail, Google's web-based email service.

Visit gmail.com to learn more.



Google


Search not only the Internet, but also the apps and contents of your device.

Google Now

Google Now works in the background to collect information you regularly look up and organize it into convenient cards that appear when you need them.

Visit google.com/landing/now to learn more.

► Press and hold the **Home** key.

Note: When Google Now is enabled, you can also access it by touching .



Google Settings

Quickly and easily change Google app settings to suit your preferences.

Note: You must be signed in to the application you want to configure. For example, sign in to Google+ to configure Google+ settings.



Google+

Stay connected and share with Google+. Chat with friends and family, post photos, and see what others are sharing.

Visit google.com/mobile/+ to learn more.



Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

Visit google.com/hangouts to learn more.



Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Visit google.com/maps to learn more.

Note: You must enable location services to use Maps. Please see [Location Services](#).



Photos

This application automatically backs up your photos and videos to your Google+ account.



Play Books

With Google Play Books, you can find millions of free e-books and hundreds of thousands more to buy in the eBookstore.

Visit play.google.com/store/books to learn more.



Play Games

Discover hundreds of games for download and purchase through the Google Play Store.

Visit play.google.com/store to learn more.



Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.

Visit play.google.com/about/movies to learn more.



Play Music

With Google Play Music, you can play music and audio files on your device.

Visit play.google.com/about/music to learn more.



Play Newsstand

Subscribe to your favorite magazines to read on your device at your leisure.

Visit play.google.com/store/newsstand to learn more.



Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play Store.

Visit play.google.com/store to learn more.



Voice Search

Use voice commands to search the web with Google.



YouTube

View and upload YouTube videos right from your device.

Visit youtube.com to learn more.

T-Mobile Applications

Enjoy these applications from T-Mobile.

Note: Certain applications require a data plan or paid subscription. Visit t-mobile.com to learn more, or contact your service provider for additional information.



Connect Me

This application provides tools for managing your T-Mobile Mobile Internet account. You can activate a new Mobile Internet line, change your plan, view data usage, and more.



Mobile HotSpot

This is a shortcut to the **Tethering and Mobile HotSpot** settings page. For more information, see [Tethering and Mobile HotSpot](#).

Note: A separate plan is required to use this feature. Charges may apply. Please contact your service provider for further details.



T-Mobile My Account

This application provides you online access to account information such as your current activity, billing information, service plans, downloads, and more.

Other Applications



Amazon

Shop at Amazon.com from your device.

Visit [Amazon.com](https://www.amazon.com) to learn more.



Businessweek +

Read Bloomberg Businessweek+ weekly for all the content of the print edition of the magazine along with exclusive content and interactive features that enrich the reading experience.

Visit [bloomberg.com](https://www.bloomberg.com) to learn more.



Downloads

This is a shortcut to see a list of all downloads made to your device.



Dropbox

Use this application to save and share files with others via the Dropbox cloud storage. When you save files to Dropbox, your device automatically syncs with the web server and any other computers that have Dropbox installed.

Visit [dropbox.com](https://www.dropbox.com) to learn more.



Evernote

Create, synchronize, and share multimedia notes. You can add tags to the notes, or sort the notes into a notebook so that you can manage your ideas efficiently.

Visit [evernote.com](https://www.evernote.com) to learn more.



Flipboard

Use this application to access your personalized magazines.

Visit [flipboard.com](https://www.flipboard.com) to learn more.



Help

View information on using your device's basic features and settings.



Lookout

Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.



NYTimes

Read the latest web edition of The New York Times newspaper.



Polaris Office 5

Polaris Office 5 is a Microsoft Office-compatible office suite for managing your documents online or offline. It can also open Adobe PDF (Portable Document Format) files.

Visit [polarisoffice.com](https://www.polarisoffice.com) to learn more.



Samsung Link

This application wirelessly synchronizes your Samsung device with your TV, streams content and even keeps tabs on who calls or sends text messages with real-time, onscreen monitoring. Samsung's Samsung Link makes staying connected easy.



Sketchbook for Galaxy

Use this application for drawing and sketching designed specifically for your S Pen.



Story Album

With Story Album, you can create a digital album of your story in media. Special moments will be on a time line, and if you wish, you can have your album published as a hard copy.



S Translator

You can easily translate words and phrases (verbal or text messages) into many different languages with S Translator.



Twitter

Twitter is a social communication tool where people broadcast short messages. These messages, called tweets, are limited to 140 characters.

Visit twitter.com to learn more.





Video Editor

Use this application to edit your videos. You can add themes to decorate your video, add voiceovers, or other options to enhance your videos.


Action Memo

An Action memo is a special type of note that turns your written text into actions on your device.

For example, if someone tells you the name of a restaurant, you can launch a new memo, write the name of the restaurant, and then have the memo locate it on a map.

Note: While active, an Action memo stays on the screen for as long as you are using it. You must tap either  **Save** or  **Discard** in order to close the memo.

To open Action Memo:

- ▶ Launch the **Air command** menu and select  **Action Memo**.

– or –

Press and hold the S Pen button and double-tap the screen with the pen.


– or –

From a Home screen, tap  **Apps** > **Samsung** folder >  **Action Memo** >  **Add**.



Linking Action Memos

Linking Action Memos allows you to use your notes in various ways. Options include Phone, Contacts, Messages, Email, Browser, Map, and Task

To link a memo to an action:




1. Write on the memo.
2. Press  **Link to action** and select an action to perform.
3. Draw around the content you want to use for the action. The selected content is boxed and highlighted.

4. On the menu bar that appears, tap the action to take.

For example, you can write a phone number, press  **Link to action**, and then select  **Contacts** to save the number to an existing contact or create a new contact.




Editing Action Memos

To Edit an Action Memo:

1. From a Home screen, tap  **Apps** > **Samsung** folder >  **Action Memo**.
2. When you tap on an Action Memo to view it, you can edit the memo immediately.
3. Edit the memo, and tap  **Save**.

Deleting Action Memos

To Delete an Action Memo:




1. From a Home screen, tap  **Apps** > **Samsung** folder >  **Action Memo**.
2. Tap  **Delete** and select the Action Memos you want to discard.
3. Tap **Delete**.

Alarm



The Alarm app offers features for keeping track of time and setting alarms.

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Alarm**.
2. Tap  **Add alarm** to configure:
 - **Time:** Choose a time for the alarm.
 - **Days:** Choose the days to use this alarm.
 - **Repeat weekly:** When enabled, the alarm repeats every week.
 - **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
 - **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.
 - **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
 - **Location alarm:** The alarm will only be activated when you are at a specified location. Tap to enable.
 - **Snooze:** Allow snoozing, and set **Interval** and **Repeat** values for the alarm while snoozing.
 - **Smart alarm:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Choose a time interval and a tone to use with smart alarm. Available when you have chosen an alarm type that includes sound.
 - **Name:** Enter a name for the alarm.
3. Tap **Save**.



Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Alarm**.
2. Touch and hold an alarm, and then tap **Delete**.

Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the = (**Equals**) key.

Additional Functions

To clear the results:

- ▶ Tap  **Clear**.

To clear the calculator history:

- ▶ Tap  **Clear history**.

To copy all or part of the calculation to the clipboard:

- ▶ Touch and hold an entry in the display field.


 

Scientific Calculator

The device can also do advanced arithmetic functions, such as *sin*, *cos*, and *tan*.


 

Calendar


Manage your events and tasks.

Create an Event or Task


 

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** and use one of the following methods:
 - **Event:** Enter an event with an optional repeat setting.
 - **Task:** Enter a task with an optional priority setting.
3. Enter details for the event or task, and then tap **Done**.

Delete an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task. Tap  **More options** > **Delete**.
– or –


 

To delete multiple events or tasks, tap  **Menu** > **Delete**, select events or tasks, and then tap **Done**.

Sharing Events

 
1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task. Tap  **More options** > **Share via**, select a sharing method, and follow the prompts.

Calendar Settings

These settings allow you to modify settings associated with using the Calendar.




1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the prompts.

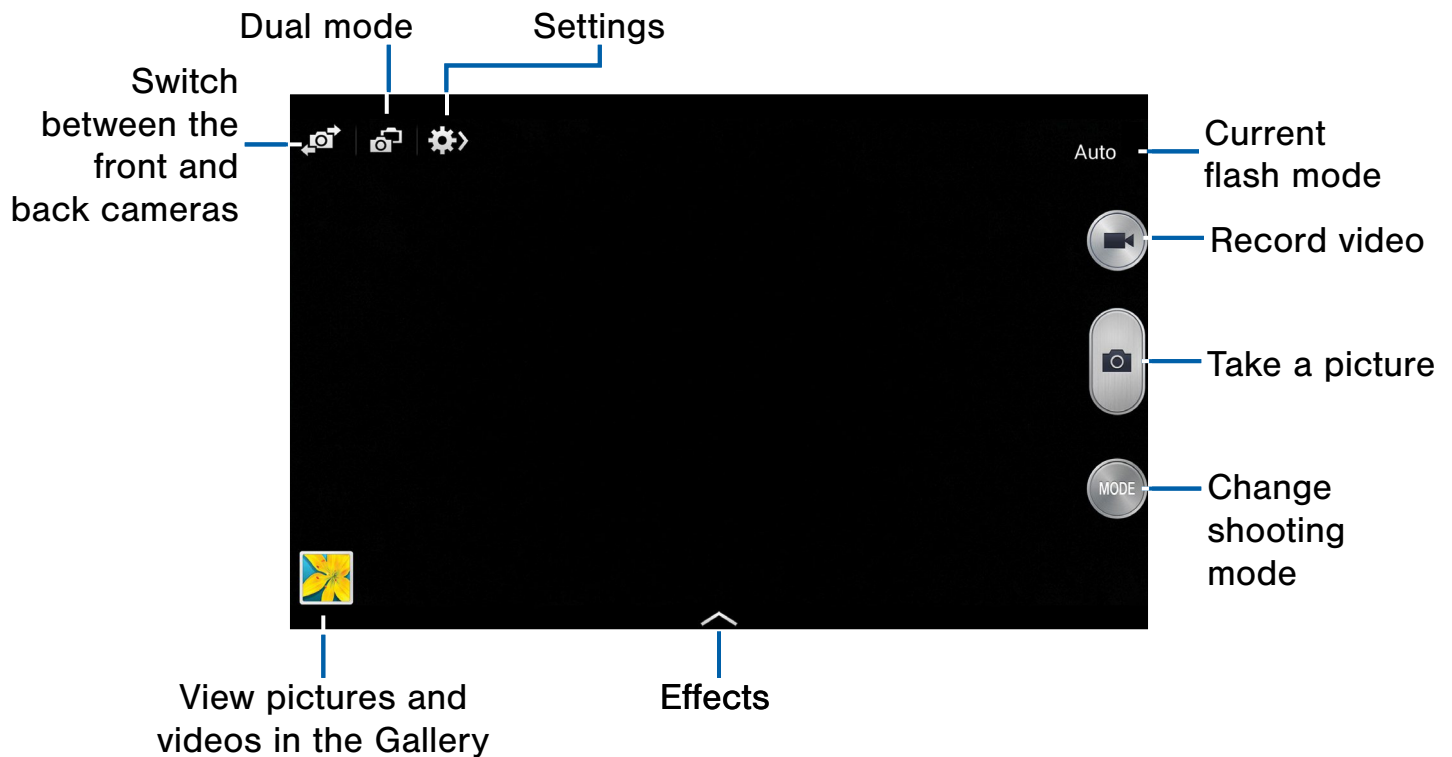Camera and Video



Taking Pictures




Take pictures with your device's front or back camera, or combine shots with Dual mode.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the onscreen options or these gestures:
 - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
 - Tap the screen to focus on the area you touched.
3. Tap  to take the picture.

Note: You can also press the **Volume** key up or down to take a picture. You can also set the Volume key to act as the video record key or as a zoom key.




Shooting Mode

Several visual effects are available. Some modes are not available when taking self-portraits.



1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **MODE** to display the following options:
 - **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
 - **Beauty face**: Take a picture with lightened faces for gentler images.
 - **Best photo**: Take eight photos and choose which ones to keep. The others will be deleted.
 - **Best face**: Select the best picture of each person from 5 consecutive pictures to get the best merged group picture.
 - **Sound & Shot**: Record up to 9 seconds of sound to accompany your picture.
 - **Drama**: Take multiple pictures of a moving object and merge them into one picture.
 - **Rich tone (HDR)**: Take pictures without losing details in bright and dark areas.
 - **Eraser**: Save the best picture after erasing moving objects from 5 consecutive pictures.
 - **Panorama**: Create a linear image by taking pictures in either a horizontal or vertical direction.
 - **Sports**: Take pictures of fast movement.

Dual Camera Mode

Take pictures and record videos using the front and rear cameras at the same time. A variety of picture-in-picture styles are available.



1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Dual camera**.

Camera and Video Settings

1. Tap  **Settings** to view shortcuts.
2. Tap  **Settings** to configure settings for Camera. Available options vary depending on the camera/recording mode used.
 - **Photo size**: Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
 - **Burst shot**: Take a series of pictures of moving subjects.
 - **Tap to take pics**: Tap the image on the preview screen to take pictures.
 - **Face detection**: Detect faces in pictures for tagging with the person's name.
 - **Metering modes**: Select a metering method. This determines how light values are calculated. Center-weighted measures background light in the center of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.
 - **ISO**: Select an ISO value. This controls camera light sensitivity. It is measured in film-camera equivalents. Low values are for stationary or brightly-lit objects. Higher values are for fast-moving or poorly-lit objects.
 - **Smart stabilization**: Helps to keep the focus steady when the camera is moving.
 - **Save as HDR (rich tone)**: Save the picture in HDR (rich tone) only.
 - **Video size**: Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
 - **Video stabilization**: Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.
 - **Location tag**: Attach a GPS location tag to the picture.
 - **Review pics/videos**: Set to show pictures or videos after taking them.
 - **Volume key**: Use the Volume key as the camera key, the record key, or as a zoom key.
 - **Timer**: Take time-delayed pictures or videos.


- **White balance:** Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Exposure value:** Change the exposure value. This determines how much light the camera's sensor receives. For low light situations, use a higher exposure.
- **Guidelines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Flash:** Activate or deactivate the flash.
- **Voice control:** Set the camera to take pictures with voice commands.
- **Contextual filename:** Available only when Location tags are turned on.
- **Save as flipped:** Save the self-portrait or self-recording as a reversed (or 'mirrored') image.
- **Storage:** Select the memory location for storage.
- **Shutter sound:** The camera will make a sound as it captures an image.
- **Reset:** Reset the camera settings.

Camera Shortcuts

1. Tap  **Settings** to view shortcuts.
2. Tap  **Settings** configure the camera settings.
3. Touch and hold a shortcut to edit which options appear as shortcuts.
4. Tap **Recording mode** and choose an option.
5. Tap **Share** and choose an option.

Effects

You can add effects to your images.

- Tap  **Effects** and choose an effect to add to your image.



Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.

For more information on connecting with and managing your accounts through your device, see [Accounts](#).



Managing Contacts

Access your list of contacts by using the Contacts app, which is a shortcut to the Contacts tab. To access your Contacts list:

- ▶ From a Home screen, tap  **Apps** >  **Contacts**.

Finding a Contact

You can search for a contact, or scroll the list to find one by name.









1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.

– or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also slide across the alphabetical list to select a letter with better precision.




Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device, your SIM card, or sync it with an account.
 - Tap  **Photo** to assign a picture to the new contact.
 - Enter a name, phone number, email address, and assign the contact to a group. Tap **Add another field** to add additional contact information.
 - Tap  **Add** to enter additional entries.
 - Tap  **Delete** to remove an entry.
 - Tap  **Expand** for additional fields.
 - Tap  **Label** to choose a label for the field.
3. Tap **Save**.




Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.




Share a Name Card

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Menu** > **Share name card via**.
3. Choose a sharing method and follow the prompts.

Link Contacts

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap **Link another contact**, and then select contact(s) to link to the original contact.

Unlink Contacts

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap  **Remove** beside contacts to unlink them from the main contact.

Delete Contacts





You can delete a single contact, or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold a contact and tap **Delete**.



Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

Mark Contacts as Favorites



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star turns gold ).

Remove Contacts from Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold a contact.
3. Tap **Remove from Favorites**.

Create a Shortcut to a Favorite




You can create a shortcut to a favorite on the home screen, to access their information directly from the home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold a contact.
3. Tap **Add shortcut to home**. The new shortcut displays in an empty area of the home screen.




Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.




Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap  **Menu** > **Create**.
3. Tap fields to enter information about the group:
 - Tap **Create group in All Accounts** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts.
 - Tap **Group name** to enter a name for the new group.
4. Tap **Add member** and select contact(s) to add to the new group, and then tap **Done**.
5. Tap **Save**.

Rename a Group




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **Menu** > **Edit group** and enter a new name.
4. Tap **Save**.

Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **Add**, and then tap the contact(s) you want to add.
4. Tap **Done**.




Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **Menu** > **Send email**.
4. Tap contacts to select them, or tap **Select all**, and then tap **Done**. (You will only see group members that have email addresses in their contact records.)
5. Choose an account and follow the prompts.




Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Groups** tab, and then tap a group.
3. Tap  **Delete**.
4. Select groups to delete and tap **Delete**.

Contact Settings



These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts** > **Contacts** tab.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Email



Use the Email app to view and manage all your email accounts in one application.

To access Email:


- From a Home screen, tap  **Apps** >  **Email**.

Configuring Email Accounts


You can configure Email for most accounts in just a few steps.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the onscreen instructions to set up your email account.

– or –




For additional accounts, tap  **Menu** > **Settings** > **Add account**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

Note: To configure email account settings at any time, tap  **Menu** > **Settings**. Tap the account to display [Account settings](#).




Refreshing Your Email Account

Refresh your account to update your email accounts.

1. From a Home screen, tap  **Apps** >  **Email**.
2. In the Application Bar, tap  **Refresh**.




Managing Your Email Accounts

You can view email you receive for all accounts on the **Combined view** screen or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** at the top left of the screen to select:
 - **Combined view:** View all email in a combined inbox.
 - **<Account Name>:** View email for only this account.




Deleting Email Accounts

To delete an Email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** > **Settings**.
3. Tap the account you want to delete, and then tap **Delete account**.

Email Settings

These settings allow you to modify settings associated with using the Email app.




1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Gallery

View, edit, and manage pictures and videos.

View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, a Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.



1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu**, and then tap an option to choose the way items display.
3. Tap an album to open it.
4. Tap an image or video to view it in full screen. Scroll left or right to view the next or previous image or video.

Zoom In and Out


Use one of the following methods to zoom in or out on an image:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.


Playing Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. Tap a video to view it.

Trimming Segments of a Video

1. Select a video, and then tap  **Trim**.
2. Use the sliders at the bottom of the screen to trim the video. Move the left bracket to the desired starting point, move the right bracket to the desired ending point.
3. Tap **Done** to save the video.




Editing Images

- While viewing an image, tap  **Menu**:
- **Edit**: User Photo Editor to rotate, crop, add effects, and more options to your images.
 - **Favorite**: Mark the photo or video as a favorite.
 - **Slideshow**: View a slideshow of your photos and videos.
 - **Photo Frame**: Add a decorative frame to the photo.
 - **Photo note**: Write a note on the 'back' of the photo.
 - **Copy to clipboard**: Copy the photo to the clipboard.
 - **Print**: Print the photo to a Samsung printer.
 - **Rename**: Enter a new file name.
 - **Buddy photo share**: Share photos with friends via face detection.





- **Rotate left:** Allows you to rotate the photo counterclockwise 90 degrees.
- **Rotate right:** Allows you to rotate the photo clockwise 90 degrees.
- **Crop:** Allows you to crop the image.
- **Set as:** Assign the photo as a Contact photo, or as the Home screen and/or Lock screen wallpaper.
- **Details:** Display details about the photo.
- **Settings:** To customize data management and enable tags.

Gallery Settings

These settings allow you to modify settings associated with using your Gallery.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap **Add account** to add a Dropbox, Google, or Facebook account.





Deleting Images


1. From a Home screen, tap  **Apps** >  **Gallery**.
 2. Tap a folder to open it.
 3. In a folder, tap  **Menu** > **Select item**, select images, and then tap  **Delete**.
- or –

When viewing an single image, tap  **Delete**.

Sharing Images

Use one of the following methods:



1. From a Home screen, tap  **Apps** >  **Gallery**.
 2. Tap a folder to open it.
 3. In a folder, tap  **Menu** > **Select item**, select images, and then tap  **Share via** to send them to others or share them via social network services.
- or –

When viewing an image full screen, tap  **Share via** to send it to others or share it via social network services.

Internet






Access the Internet with a fully featured web browser.

Access the Internet

- ▶ From a Home screen, tap  **Apps** >  **Internet**.

Command Keys

The following command keys are available:

-  **Back** or  **Back** key to return to the previous page.
-  **Forward** to go forward to a recent page.
-  **Home** to display your Internet Home screen.
-  **Refresh** to reload the current page.

Viewing Web Site

To view a web site:

- ▶ Tap the address field, enter the web address, and then tap **Go**.

To share, save, or print the current web page:

- ▶ Tap  **Menu**.

To zoom in or out:

- ▶ Tap the screen twice or pinch the screen to zoom out and stretch the screen to zoom in.

Browser Tabs

Use tabs to view multiple web pages at the same time.

To open a new tab:

- ▶ Tap  **Menu** > **New tab**.

To close a tab:

- ▶ Tap  **Close**.

Bookmarks

To bookmark the current web page:

- ▶ Tap  **Bookmarks** > **Add**.

To open a bookmarked web page:

- ▶ Tap  **Bookmarks** and tap an entry.


History

To view a list of recently visited web pages:

- ▶ Tap  **Bookmarks** > **History** tab.

Saved Pages

To save a web page:

- ▶ Tap  **Menu** > **Save Web page**.

To view a list of saved web pages:

- ▶ Tap  **Bookmarks** > **Saved pages** tab.

Sharing Pages

To share a web page address with others:

- ▶ Tap  **Menu** > **Share via** and follow the prompts.

Incognito Tabs

Pages viewed with incognito tabs do not appear within your browser history or search history, and leave no traces (such as cookies) on your device.

Incognito tabs display  **Incognito** on their tab.




Note: Any downloaded files will remain on your device after you close the incognito tab.

To open a new incognito tab:

- ▶ Tap  **Menu** > **New incognito tab**.

Internet Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Messages

Learn how to send and receive different messages using the default messaging app on your device.

Types of Messages

Your default Messaging app provides the following message types:

- Text Messages (SMS)
- Multimedia Messages (MMS)





The Short Message Service (SMS) lets you send and receive text messages to and from other mobile devices or email addresses. To use this feature, you may need to subscribe to your service provider's message service.


The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile devices or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type.

Creating and Sending Messages

This section describes how to create and send a message using the Messaging app.

1. From a Home screen, tap  **Apps** >  **Messages** >  **Compose**.
2. Tap the **Enter recipients** field to manually enter a recipient or tap  **Add Recipient** to select a recipient from your Contacts. You can also select the recipient based on Groups, Favorites, or Logs.
3. If adding a recipient from your Contacts, tap the contact to place a check mark then tap **Done**. The contact will be placed in the recipients field.
4. Enter additional recipients by separating each entry with a semicolon (;) and then using the previous procedure. More recipients can be added at any time before the message is sent.

For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.
5. Tap the **Enter message** field and use the onscreen keypad to enter a message. For more information, please see [Entering Text](#).
6. Review your message and tap  **Send**.

Note: If you exit a message before you send it, the message is automatically saved as a draft.

Viewing New Messages


When you receive a new message, a new message icon appears on the Status Bar.


To view the message:

1. Open the Notification Panel and select the message. For more information, please see [Notification Panel](#).




– or –

From a Home screen, tap  **Apps** >

 **Messages**, and then tap the new message to view it.





2. To play a multimedia message (audio or video), tap  **Play**.
3. To scroll through the list of messages, tap the screen and scroll up or down the page.

Deleting Messages

1. From a Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Delete**.
3. Tap each message you want to delete or tap **Select all**.
4. Tap **Delete**.
5. At the **Delete conversations** prompt, tap **OK** to delete or **Cancel** to cancel.




Message Search

You can search through your messages by using the Message Search feature.

1. From a Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Search**.
3. Enter a word or phrase to search for, and then tap  **Search** on the keyboard.

Messaging Settings

Configure the settings for text messages, multimedia messages, push messages, and so on.

- From a Home screen, tap  **Apps** >  **Messages** >  **Menu** > **Settings**.

Emergency Alerts

 
This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:



- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

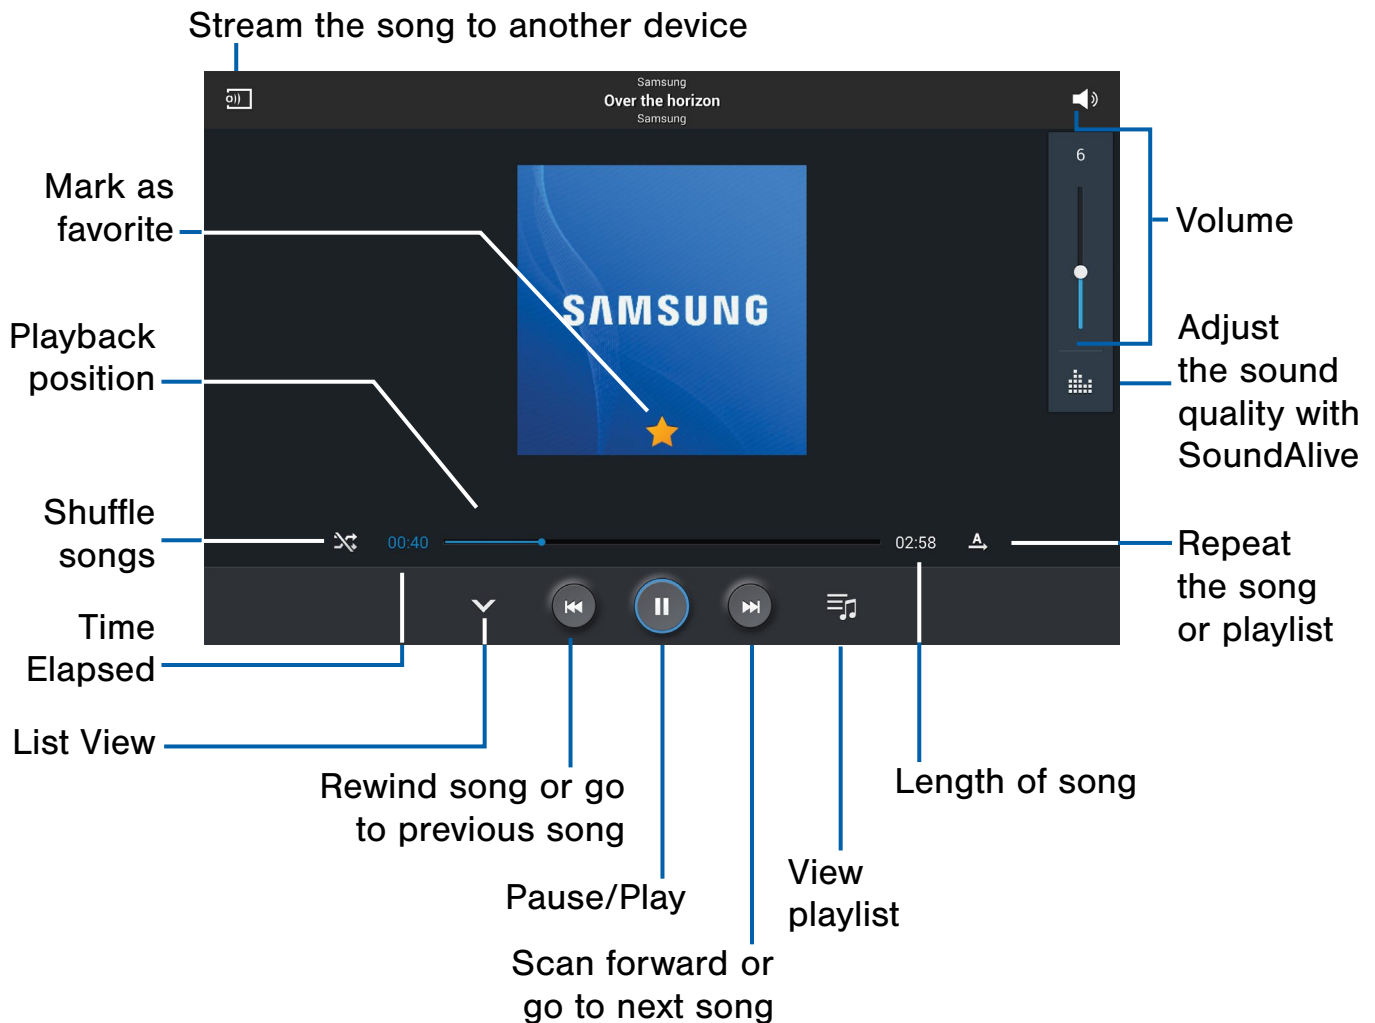Music Player



Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized playlists.

Listen to Music

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.



My Files

Access files stored on your device, including images, videos, songs, and sound clips.


View Files

Files stored in the device are sorted into groups:


- **Timeline:** View files that are grouped by date.
- **FAVORITE FOLDERS:** View shortcuts to folders or FTP servers.
- **FOLDERS:** View files stored in the internal memory or a memory card.
- **CATEGORIES:** View files sorted by their types.
- **APPS:** View files stored or created in specific applications.





1. From a Home screen, tap  **Apps** >  **My Files**.
2. Select a group, and then tap a file or folder to open it.


Category Options

- After selecting a category, tap  **Menu** for options:
- **Select:** Select files or folders.
 - **Sort by:** Sort files or folders.
 - **Delete:** Select the files you want to delete.
 - **Add FTP:** Add an FTP server shortcut in Favorite folders.
 - **Scan for nearby devices:** Search for devices that have media sharing activated.
 - **Display options:** Change the file manager settings.

File Options

- Tap  **Menu** > **Select**, select a file or folder, and then use one of these functions:




-  **Share via:** Send files to others or share them.
-  **Delete:** Delete files or folders.
-  **Move:** Move files or folders to another folder.
-  **Copy:** Copy files or folders to another folder.

Tap  **Menu** for additional options:

- **Go to folder:** Go to the folder in which the file resides.
- **Rename:** Rename a file or folder.
- **Add shortcut to home:** Add a shortcut to a file or folder to the Home screen.
- **Details:** View file or folder details.


Additional Functions

The following functions are available:

- Tap  **View** to change the view mode.
- Tap  **Storage usage** to view memory information for your device and memory card (not included).
- Tap  **Search**, and then enter search criteria.

Add Shortcuts to Folders

Add a shortcut to frequently-used folders in Favorite folders.

- Select a folder and tap  **Menu** > **Add to Favorite folders**.

S Note




The S Note app helps you create, edit, and manage notes.

Sign in to your Samsung account to access your notes in S Note from any device.



With S Note, create content by typing, writing, drawing, and even recording voice, video, or taking pictures. Templates are provided to make content creation easy and help keep things organized.

Create a Note

To create a note with S Note:


1. From a Home screen, tap  **Apps** >  **S Note**.
2. Tap  **Create new note**.
3. Use the S Pen to create content.

To use a template:

1. Tap  **Page options** > **Add template**.
2. When finished, tap  **Save**.

Edit a Note



When in the S Note app, you can edit notes as follows:

1. Tap a note to view it.
2. Tap  **Edit** to edit the note.

Note: Action memos behave differently from other notes. When you tap on an Action memo to view it, you can edit the memo immediately.

Note Tools



When creating or editing a note in S Note, some helpful modes and tools are provided.

- **Handwriting mode:** Write or draw freehand with the S Pen. Tap once to select Handwriting mode. Tap again to change the S Pen settings.
- **Text mode:** Type text using the keyboard. Tap once to select Text mode. Tap again to change the Text settings.
- **Eraser mode:** Erase content from the note. Tap once to select the eraser. Tap again to change the Eraser settings.
- **Selection mode:** Select content in the note. Tap once to use Selection mode. Tap again to switch between Lasso and Rectangle modes. Draw around the content you wish to select. Depending on the selection, several options are available to move, edit, or reshape the content.
- **Undo:** Tap to undo the last action.
- **Redo:** Tap to redo the last action.
- **Save:** Tap to save the note. The note switches to View mode. To edit the note again, tap  **Edit**.
- **Insert:** Add voice memos, images, video, and more.
- **Magnified notepad:** Magnify a portion of the notepad.
- **S Pen (and finger) Mode:** Tap to switch between **S Pen only** edit mode and **S Pen and finger** edit mode.
- **Page options:** Customize the page layout.
- Tap  **Menu** to view more options for the note.

S Voice




Speak commands to perform operations on your device, and to speak criteria for searches and other operations.

Use S Voice to find everything from directions to trivia answers to the current weather forecast.

1. From a Home screen, tap  **Apps** > **Samsung** folder >  **S Voice**.
2. Speak a command.
3. Tap the **microphone** icon, if the device does not hear you, or to give it another command.

S Voice Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **S Voice**.
2. Tap  **Menu** > **Settings**.
3. Tap an option and follow the onscreen instructions.

Samsung Apps / GALAXY Apps


Samsung Apps is now Galaxy Apps. When you access Samsung Apps, GALAXY Apps will be installed on your device.

Samsung GALAXY Apps is a free storefront that provides a quick and easy way to find and download apps that are compatible with your Galaxy device.

GALAXY Essentials is a collection of specially chosen applications available through Samsung Apps.

From GALAXY Essentials, you can access and download a collection of premium content, free of charge.

To access the Samsung GALAXY Apps website:

- From a Home screen, tap  **Apps >**
 **GALAXY Apps.**

To access GALAXY Essentials:

1. Swipe across the GALAXY Apps screen and then tap **GALAXY Essentials**.

– or –

Swipe across the Home screens and locate and tap the GALAXY Essentials widget.
2. Follow the onscreen instructions to download GALAXY Essential apps specially chosen from Samsung Apps.

Note: A Samsung account is required to purchase and download apps.



Scrapbook

The Scrapbook app provides a place for you to manage the multimedia content you capture with the S Pen tools.

Scrapbook provides storage and organization tools for content you capture while using your mobile device. With the S Pen tools, you can capture articles, images, and even videos and music. You can then add a title, text, a handwritten memo, or content tags. When you capture content online, the web link is saved with the content.


Editing the Scrapbook

Content in the Scrapbook can be edited. To open the Scrapbook:


- From a Home screen, tap  **Apps** >  **Scrapbook**.

You can edit both Categories and the content files within them.

 
To edit a file:

1. Tap  **Open** to view categories and tags.
2. Select either the category or tag that contains the file.
3. Tap the file to edit.
4. Tap the tag, image, or memo to edit.

To edit a Category:



1. Tap a category to open it.
2. Tap  **Menu** > **Edit category**.
3. You can edit the Title and the Layout. Change them as desired.
4. When finished, tap **Save**.

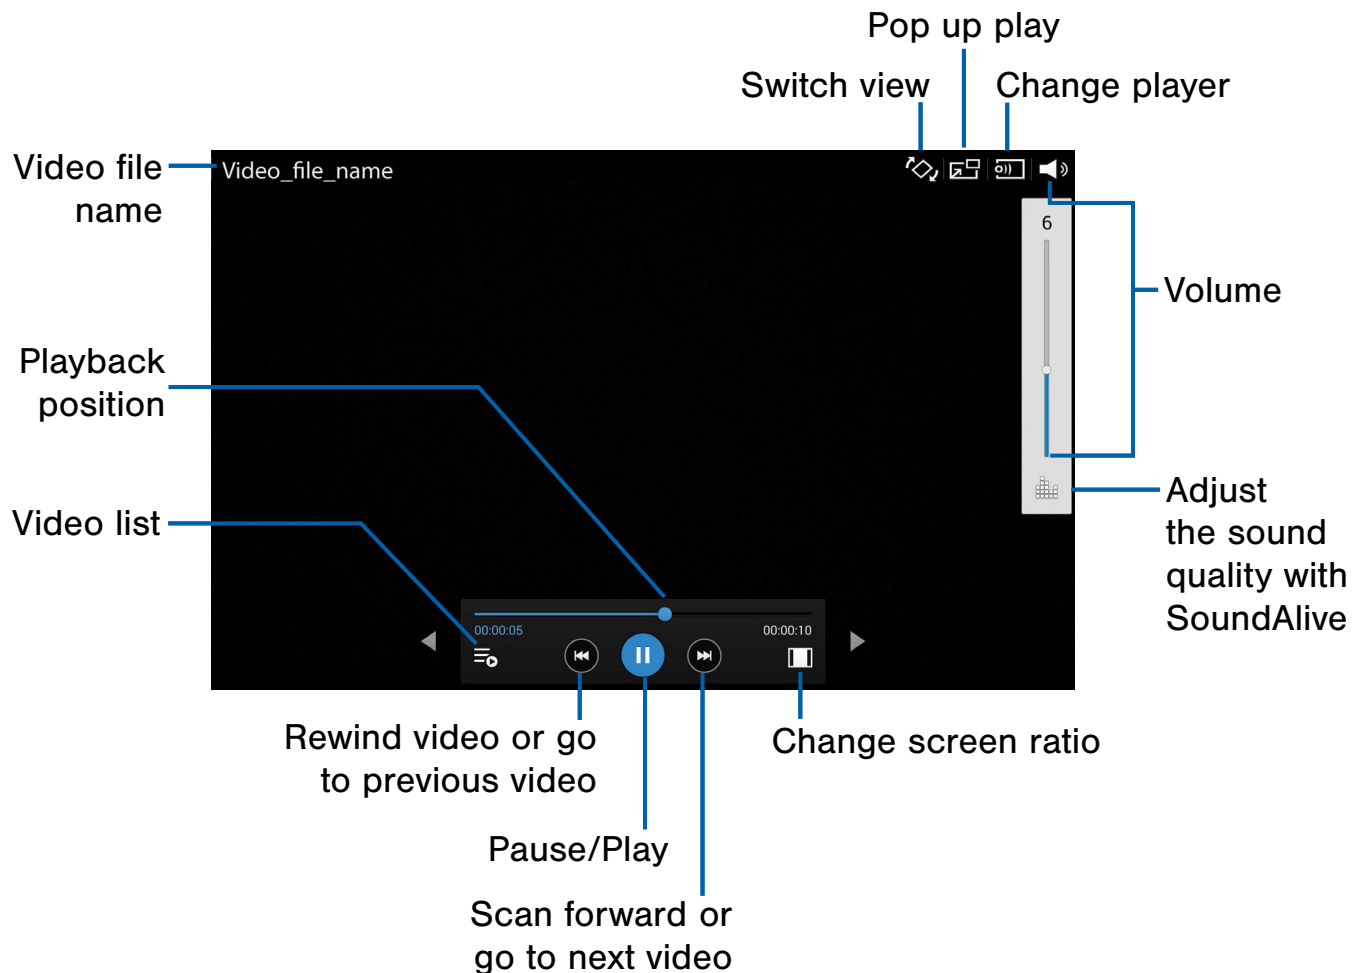Video Player






Play and manage videos stored on your device.

To access video:

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

Use Pop-Up Play

Multi task with Pop-Up Play—transform your video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  to continue playing the video in a floating window.
 - Drag the window to any location on the screen.
 - Use two fingers to pinch or spread to resize the floating window.



WatchON

WatchON turns your tablet into a remote control. Not only can you control your TV, set-top box, DVR and other devices from your tablet, but it will recommend great shows and movies based on your preferences and past viewing behavior.

You can search, discover, explore, and access what's on live TV, and on-demand movies and TV shows across multiple video-on-demand providers.


Note: Before initiating use, verify you have an active Internet connection available (either mobile network or Wi-Fi connection).

Set Up WatchON

1. From a Home screen, tap  **Apps** >  **WatchON**.
2. Tap **Set up WatchON**.
3. Follow the prompts to configure WatchON options, such as ZIP code, TV service provider, channel list setup, and so on.

Note: Tap  **Menu** > **Help** to learn more about WatchON.

Configure Your Device as a Remote




1. From the WatchON tool bar, tap  **Remote Control**.
2. Tap **Setup** at the prompt.
3. Follow the instructions to find your TV or other devices and configure your device to control their operation.

World Clock



The World Clock app offers features for keeping track of time anywhere in the world.

Add a City

View the date and time in any time zone.




1. From a Home screen, tap  **Apps** >  **World Clock**.
2. Tap  **Add** to add a city to display.
3. Type the city name, and choose from the list that displays.

Delete a City

1. From a Home screen, tap  **Apps** >  **World Clock**.
2. Touch and hold an entry, and tap **Delete**.



Settings

Configure your device's connections and settings, add accounts, and customize the home screen, apps, and features.


- Some options use an **ON/OFF** button to turn the option on () or off ().
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  checkbox. When enabled, a check mark displays. Tap the check mark to remove it and disable the option.

How to Use Settings

Accessing Settings




- From a Home screen, tap  **Apps** >  **Settings**.

– or –

From a Home screen, drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Setting search feature.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Search**.
 - Enter a word or words in the Search box. As you type, settings that match will appear on the screen.
 - Tap an entry to go to that setting.



Wi-Fi and Wi-Fi Direct

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a Wireless Access Point (WAP).



Wi-Fi Direct creates a direct connection between two or more devices using Wi-Fi.

Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on or off.


Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.

When Wi-Fi is first turned on, your device will automatically scan for available networks and display them.

3. Tap the network you want to connect to.
 - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.
 - To manually scan for networks, tap **Scan**.

Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Add Wi-Fi network**.
4. Enter information about the Wi-Fi network:
 - Tap **Network SSID** to enter the name of the Wi-Fi network.
 - Tap the **Security** field and select a security option and enter your password.
5. Tap **Connect** to store the new information and connect to your target WAP.

Wi-Fi Status Indicators

These Status bar icons show your current Wi-Fi connection status:






Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



A Wi-Fi access point is available, but your device is not connected to it. It may also display if there is a communication issue with the target Wireless Access Point (WAP).

Wi-Fi Settings

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.




1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Smart network switch** to automatically switch between Wi-Fi and mobile networks to maintain a stable Internet connection.
4. Tap  **Menu** for options:

- **Advanced:**

- **Network notification:** Receive a notification when new Wireless Access Points (WAPs) are available.
- **Passpoint:** Connect to passpoint-enabled Wi-Fi Access Points automatically.
- **Sort by:** Sort Wi-Fi networks by Alphabet or Signal strength.
- **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
- **Always allow scanning:** Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Install certificates:** Install authentication certificates.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).
- **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
- **WPS PIN entry:** View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
- **Help:** Learn about setting up and using Wi-Fi networks, and other settings.

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.
 - Tap **Multi connect** to scan for devices that support multi connect. Select the devices and follow the prompts to establish the connections.
 - To rename your device (as seen by other devices), tap  **Menu** > **Rename device**.

Wi-Fi Direct Status Indicator





Displays when your device is connected to another device using Wi-Fi Direct.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.




Note: The Bluetooth communication range is approximately 30 feet.

Turn Bluetooth On or Off

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.




Change Your Device's Name

Change the name others will use when pairing with your device via Bluetooth.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth** >  **Menu** > **Rename device**.
3. Tap **Device name** and edit your device name.

Making Your Device Visible to Other Bluetooth Devices



When you make your device visible, other Bluetooth can find it in a scan and initiate pairing. You can choose the length of time your device remains visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **Bluetooth** >  **Menu** > **Visibility timeout**.
4. Select a time period for your device to remain visible after you turn on visibility.

Tip: Under MY DEVICE, tap the check box next to your device. Your device is then visible to other Bluetooth devices for the length of time set under Visibility timeout.

Scan for Bluetooth Devices

When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.



To manually perform a new scan:

- ▶ Tap **Scan**.

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.


Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **Scan**. Your device starts scanning for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your device then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.




Delete a Paired Device (Unpairing)

When you unpair from a Bluetooth device, the two devices no longer recognize each other. To connect again, you must pair the devices.


1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  next to the previously paired device, and then tap **Unpair** to delete the paired device.

Review Files Received via Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Bluetooth** >  **Menu** > **Received files**.

Bluetooth Status Indicators



When Bluetooth is turned on,  displays in the Status Bar.

Tethering and Mobile HotSpot

Share your device's Internet connection with a computer that connects to your device using a USB cable or via Bluetooth.

Use Mobile HotSpot to share your device's Internet connection with other devices using your device as a portable Wi-Fi hotspot.

Connect Your Device to a Computer Using Tethering

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Choose a tethering method:
 - **USB tethering**: Connect the computer to the device using the USB cable, and then tap **USB tethering** to turn tethering on.



Use Your Device as a Portable Wi-Fi Hotspot

Note: You must have a tethering plan on your service account in order to use the Mobile HotSpot.

Warning! Mobile HotSpot consumes battery power and uses data service.

Turn Mobile HotSpot On or Off



Activate your device's Mobile HotSpot application to allow other devices to use your device's Internet connection.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **ON/OFF** to turn Mobile HotSpot on or off.

Warning! By default, your device's Mobile HotSpot has no security applied, and any device can connect. For more information, see [Configure Mobile HotSpot Settings](#).

Connect a Device to Your Mobile HotSpot


Use the other device's Wi-Fi control to connect to your device's Mobile HotSpot .

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **ON/OFF** to turn on Mobile HotSpot.
3. Activate Wi-Fi on the target device.
4. Scan for Wi-Fi hotspots and select the target device from the list.
5. On the target device, create your device's Mobile HotSpot password.




Allowed Device List

Control whether devices connect to your Mobile HotSpot with the Allowed device list. After you add devices to the list, they can scan for your device and connect using your device's Mobile HotSpot name and password.

Note: Using your device as a Mobile HotSpot consumes battery power and uses data service. While Mobile HotSpot is active, your device's applications will use the Mobile HotSpot data service. Roaming while using your device as a Mobile HotSpot will incur extra data charges.




1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **Mobile HotSpot**.
3. Tap **ON/OFF** to turn on Mobile HotSpot.
4. Tap **Allowed devices**, and then tap  **Add** to enter the other device's Device name and MAC address.
5. Tap **OK** to add the device.

Change the Mobile HotSpot Password

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **Mobile HotSpot**.
3. Tap  **Configure**.
4. Tap the **Security** field and select **WPA2 PSK** and enter a new password.




Turn Off Mobile HotSpot Automatically

Set your device to automatically turn off Mobile HotSpot if there are no connected devices.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **Mobile HotSpot**.
3. Tap  **Configure**.
4. Tap **Show advanced options** > **Timeout settings**, and choose a time period.

Configure Mobile HotSpot Settings



Manage your Mobile HotSpot security and connecting settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Tethering and Mobile HotSpot**.
2. Tap **Mobile Hotspot** >  **Configure** for options.
 - **Network SSID:** View and change the name of your Portable Wi-Fi hotspot.
 - **Broadcast network name (SSID):** Make your Mobile HotSpot invisible to other Wi-Fi devices during a scan. Other devices can still connect to your Mobile HotSpot, but will have to set up the connection manually with your Network SSID and Password.
 - **Security:** Choose the security level for your Mobile HotSpot.
 - **Password:** If you choose a security level that uses a password, enter the password.
 - **Show password:** Display your password instead of masking it.
 - **Show advanced options:** Access advanced options, including Broadcast channel, and to specify the channel your device uses for Mobile HotSpot.

Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features, such as Wi-Fi.

While in airplane mode, you can use other features, such as playing music, watching videos, and other online applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Airplane mode**, and then tap **ON/OFF** to enable or disable the option.



Note: You can also control Airplane mode from the Device options menu. Press and hold the **Power/Lock** key, and then tap **Airplane mode**.

Download Booster

Download Booster improves download speed by using both Wi-Fi and LTE networks at the same time when downloading files over 30 MB in size.

Note: Download Booster uses mobile data services.



To turn on Download Booster:

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **Download booster**, and then tap **ON/OFF** to turn Download Booster on or off.
 - If you want to turn off download speed info, tap the check box next to **Do not show speed info**.

Data Usage

Monitor your mobile data usage.

Note: Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Data usage** for options:

- **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
- **Set mobile data limit:** Disable your mobile data connection when the specified limit is reached. Drag the red limit line to set the data usage limit.
- **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
- **Upgrade data service:** Explore data plan upgrade options for your rate plan



2. Tap  **Menu**:

- **Data roaming:** Enable data roaming on your device.
- **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
- **Auto sync data:** Set your accounts to automatically sync.
- **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.
- **Mobile HotSpots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

Location Services



Some apps, such as Google maps, may require one or more location services be turned on for full functionality.

Locating Method

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Mode** to select how your location is determined:
 - **High accuracy:** Use GPS, Wi-Fi, and mobile networks.
 - **Power saving:** Use Wi-Fi and mobile networks (no GPS).
 - **GPS only:** Use GPS only.



Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap an entry to view the app's settings.





Location Reporting

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Google Location Reporting** for options:
 - **Location Reporting:** Allow Google apps to use your device's most recent location data.
 - **Location History:** Allow Google to store a history of your location data. Tap **DELETE LOCATION HISTORY** to permanently delete your location history.



My Places

You can save your favorite locations for use with services that require location information. This information can improve your search results and other location-related activities.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **My places**.
4. Tap a category to add a location:
 - Tap  **Add** to add additional categories.
 - Tap  **Menu** > **Delete** to delete a custom category.
 - Home, Office, and Car cannot be deleted.



Default Messaging App

If you have multiple messaging apps installed, you can select which app should be your default messaging app.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab.
2. Tap **More networks** > **Default messaging app** to select a default.

Printing



Print images and documents to Samsung printers and other compatible printers (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks**.
2. Tap **Printing**.
3. Tap a print service and follow the prompts.

Note: Tap **Download plug-in** to install additional print service drivers.

Mobile Networks

Control your device's access to networks and mobile data service.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More networks** > **Mobile networks** for options:
 - **Mobile data:** Allow your device to connect to a mobile data network.
 - **Data Roaming:** Allow your device to connect to data services while roaming. Significantly higher charges may result.
 - **Access Point Names:** To use Wi-Fi, you need access to a wireless access point (hotspot). Touch to display a list of the Access Point Names. The active access point displays a green, filled circle to the right of the name.
 - **Network mode:** Choose a preferred network mode.
 - **Network operators:** Using this feature, you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic. The current network connection displays at the bottom of the list.

Virtual Private Networks (VPN)



Set up and manage your Virtual Private Networks (VPNs).

Note: You must set a screen lock PIN or password before setting up a VPN. For more information, see [Lock Screen](#).



Adding a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Tap **Add** and follow the prompts to set up your VPN.

Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Tap the VPN, enter your log in information, and tap **Connect**.



Edit or Delete a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Touch and hold the VPN that you want to edit or delete.

Nearby Devices



Share your media files with nearby devices via Wi-Fi, Wi-Fi Direct, or Mobile HotSpot.

Warning! If file sharing is enabled, other devices can access your data. Use this option with care.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Nearby devices**.
2. Tap **ON/OFF** to enable Nearby devices.
3. Set the following options:
 - **Content to share:** Select the content to share. Choices are: Videos, Photos, and Music.
 - **Allowed devices:** Indicate the devices accessible to your device.
 - **Denied devices:** Indicate devices not allowed access to your device.
 - **Download to:** Allow downloading of data to your device or optional memory card (not included).
 - **Receive files from other devices:** Warn if a device attempts to upload data to your device.

Screen Mirroring

Share Your Device's Screen with Another Device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Connections** tab > **Screen Mirroring**.
2. Tap **ON/OFF** to enable Screen Mirroring.
 - Available devices are listed.
 - Tap **Scan** to find more devices.
3. Tap a device and follow the prompts to connect.



Sound Settings

Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.

Adjust the Volume



Set the system volume level, and set default volume for notifications and other audio.

Tip: You can also set System volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Volume**, and then drag the sliders to set the default volume for:
 - Music, video, games and other media
 - Notifications
 - System



Set Vibration Intensity

Adjust the vibration intensity for Notifications and Haptic feedback.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Vibration Intensity**.
3. Adjust the sliders for Notifications and Haptic feedback. When finished, tap **OK**.



Change the Notification Sound

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Notifications**.
3. Tap a sound to preview it, and then tap **Done** to set it as your default notification sound.



Play Tones When Touching or Tapping the Screen

Play tones when you touch or tap the screen to make selections.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Touch sounds** to turn the feature on.



Set the Screen Lock Sound

Play a sound when you unlock the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Screen lock sound** to turn the feature on.



Use Haptic Feedback

Set the device to vibrate when you tap the Back key and Recent apps keys, and for certain screen interactions.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Haptic feedback** to turn the feature on.



Set Notification Sounds for Samsung Applications

Choose notification alerts for new messages, email, and calendar events.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** for options:
 - **Messages:** Customize messaging notifications and alerts.
 - **Email:** Configure your email account notifications.
 - **Calendar:** Configure your event notifications.



Play a Sound Or Vibrate When Using the Samsung Keyboard

Play a sound when typing on the Samsung Keyboard.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** for options:
 - **Sound when tapped:** Play a tone when you tap an onscreen key.
 - **Vibrate when tapped:** Vibrate when you tap an onscreen key.

Music Settings



Adjust the sound to your personal preferences using Adapt Sound.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Sound** > **Adapt Sound** and follow the onscreen prompts.

Display Settings

Adjust the Screen Brightness



Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Brightness** for options:
 - Tap **Automatic brightness** to allow the device to adjust brightness automatically.
 - To set a custom brightness level, clear the Automatic brightness check mark and drag the **Brightness level**.

Note: You can also control Brightness from the Notification panel. Drag down the Status bar at the top of the screen to find the Brightness options.



Set the Screen Timeout Delay

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Screen timeout**, and then choose a time period.

Select a Screen Mode

Choose a screen mode to match your type of viewing. You can choose to have the device automatically adapt the display depending on the type of image being displayed, and other criteria such as battery level.




1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Screen mode**, and then choose a screen mode.
 - To have your device automatically optimize the display to match the type of image being displayed and other criteria, such as battery level, tap **Adapt display**.

– or –

Choose a specific type of screen mode based on what you are viewing.







Reading Mode

Optimize the screen for reading with selected applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Reading mode**.
3. Tap **ON/OFF** to enable the feature.
4. Tap  **Edit** to select additional applications for use with Reading mode.



Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included), or while charging. You can choose to display colors, or display photos stored on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Daydream**. Tap **ON/OFF** to turn Daydream on. Configure options:
 - **Colors:** Tap the selector to display a changing screen of colors.
 - **Desk Home screen:** Select items to display while the device is docked.
 - **Flipboard:** Display pictures from Flipboard. Tap  **Settings** for options.
 - **Google Photos:** Display pictures from your Google Photos account. Tap  **Settings** for options.
 - **Photo Frame:** Display pictures in a photo frame. Tap  **Settings** for options.
 - **Photo Table:** Display pictures in a photo table. Tap  **Settings** for options.
3. Tap **Start now** to see a demonstration of Daydream.



Show Battery Percentage

Display the percentage of battery remaining in the Status Bar.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Show battery percentage** to enable/disable.

Edit After Screen Capture



Go to edit screen after capturing a screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Display** > **Edit after screen capture** to enable/disable.

Multi Window Settings

Turn on the Multi window feature.



For more information, see Using Multi Window.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Multi window**.
2. Tap **ON/OFF** to enable. The following option is available:
 - **Open in multi window view:** Automatically view content in a multi window when you open files from My Files or Video, or attachments from email.

Lock Screen

Choose a method for unlocking your screen. Different Screen Locks have different levels of security and options.

Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Lock Screen**.
3. Tap **Screen lock** to select a screen lock and level of security:
 - **Swipe**: Swipe the screen to unlock it. This option provides no security.
 - **Signature**: Use the S Pen to sign your name to unlock your device.
 - **Pattern**: A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
 - **PIN**: Select a PIN to use for unlocking the screen. This option provides medium to high security.
 - **Password**: Create a password for unlocking the screen. This option provides high security.
 - **None**: Never use a Lock screen.

Screen Lock Options

Swipe Only

- **Unlock effect**: Set the visual effect used when unlocking the screen.
- **Ink effect**: This option changes the color of the ink effect.
- **Shortcuts**: Set shortcuts on the lock screen.
- **Wake up in lock screen**: Use wake-up commands when swipe unlock is enabled.
- **Help text**: Show help text on the lock screen.

Signature Only

- **Make signature visible**: Display the pattern as your draw it.
- **Accuracy level**: Choose a level of accuracy required for recognizing your signature.

Pattern Only

- **Make pattern visible**: Display the pattern as your draw it.
- **Vibration feedback**: Vibrate when the unlock pattern is entered incorrectly.



All Screen Locks

- **Clock widget options**: Choose how to display the clock widget on the lock screen.
- **Personal message**: Customize a personal message to display on the lock screen.
- **Owner Information**: Show owner information on the Lock screen.
- **Action memo on lock screen**: Tap to allow Action memos while on the lock screen.
- **Lock automatically**: Screen will be locked in 5 seconds after screen automatically turns off.
- **Lock instantly with power key**: Tap to enable this feature.

Wallpaper Settings

Change the look of the home and lock screens with wallpaper.



You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Wallpaper**, and then choose **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose where to get a wallpaper image from:
 - Tap **Gallery** to select an image from the Gallery.
 - Tap **Live wallpapers** for animated wallpaper. (Animated wallpaper consumes additional battery power).
 - Tap **Photos** to choose from your Google Photos account. (Home screen only.)
 - Tap **Wallpapers** to choose from preloaded images.
 - Tap **Travel wallpaper** to see recommended travel destinations (Lock screen only).
4. Tap **Set wallpaper**.



Font

Change the font style and size for your device.

Changing the Font Style

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Font** > **Font style**.
3. Tap a font to select it, or tap **Download** to add new fonts.



Changing the Font Size

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Font** > **Font size**.
3. Tap a size to select it.



Notification Panel Settings

Customize which Quick setting buttons appear on the Notification Panel.

You can also customize which apps appear on the Recommended applications menu on the Notification panel when you perform certain actions, such as plugging in earphones.

- From a Home screen, tap  **Apps** >  **Settings** > **Device** tab > **Notification panel**.

– or –

From the Notification panel, tap  **View all** >  **Edit**.

The following options are available:

- Tap **Brightness and volume** to be able to adjust the screen brightness and volume from the Notification Panel.
- Tap **Recommended applications** to show selected apps on the Notification panel after certain actions, such as connecting earphones. Tap **ON/OFF** to turn the feature on.

To customize which quick setting buttons appear at the top of the Notification panel:

- Tap and drag buttons to reorder them.




To use the default layout:

- Tap **Reset**.

Recommended Applications

When you perform certain actions, such as plugging in earphones, the Notification panel can display shortcut to your favorite related apps, such as Music Player or Google Play Music.



To customize which shortcuts appear on the Recommended apps menu:

1. From a Home screen, tap  **Apps** >  **Settings** > **Notification panel**.
2. Tap **Recommended applications**.
3. Tap **ON/OFF** to turn the feature on.
4. Tap  **Edit** and choose which apps to display on the Notification Panel when you insert earphones or when docking.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities.

Note: You can download additional accessibility applications from the [Google Play Store](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Accessibility** for options:
 - **Auto rotate screen:** Tap to enable this feature.
 - **Screen timeout:** Tap to select a time period.
 - **Speak passwords:** Read the characters aloud as you enter your passwords.
 - **Single tap mode:** Tap to stop or snooze alarms and calendar events.
 - **Show shortcut:** Enable to add accessibility settings under device options when you press and hold the power key.
 - **Manage accessibility:** Export your accessibility settings and share them with another device.

Services

- **TalkBack:** Speak feedback aloud to help blind and low-vision users.
 - TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

Additional accessibility apps may be downloaded from the [Google Play Store](#). Certain accessibility services you install may be configured here.

Vision

- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Negative colors:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap **Color adjustment** for options.
- **Notification reminder:** Play a beep when a notification has been missed.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Tap **ON** to turn the feature on.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [Text-To-Speech Options](#).

Hearing

- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.
- **Turn off all sounds:** For privacy, turn off all notifications and audio.
- **Flash notification:** Set your camera light to blink whenever you receive a notification.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap Google subtitles (CC) for options.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available. Tap Samsung subtitles (CC) for options.

Dexterity



- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Press and hold delay:** Select a time interval for this tap gesture.


Recognition

- **Interaction control:** Block areas of the screen from touch interaction. Disable Auto rotate screen and hard key functions. Only show application notifications in the Notification Panel and the Status bar.

Blocking Mode

Turn off notifications for selected features.



1. From a Home screen, tap  **Apps** >  **Settings** > **Device** tab.
2. Tap **Blocking mode**.
3. Tap **ON/OFF** to turn the feature on.
4. Configure options:
 - Tap **Disable notifications** to block all notifications.
 - Tap **Disable alarm** to block all alarms.
 - The SET TIME option allows you to set Blocking mode for a specific time range or to always keep it on.
 - Tap the **Always** field to disable it and configure the **From** and **To** time fields.

Note: When Blocking Mode is enabled,  displays in the Status Bar.



Language and Input Settings

Configure your device's language and input settings.

Set Your Default Language

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.




Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input** > **Default**.
3. Select a keyboard.

Note: Additional keyboards can be downloaded from the Google Play Store.

Samsung Keyboard Settings

Configure options for using the Samsung keyboard.




1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input**.
3. Tap  **Settings** next to Samsung keyboard for options:
 - **Select input languages:** Choose which languages are available on the keyboard. To switch between languages, slide the space bar sideways.
 - **Predictive text:** Allow Predictive text to suggest words matching your text entries, and, optionally, complete common words

automatically. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites—improving its accuracy of predicting your text entries.

- Additional keyboard settings provide assistance with capitalization, punctuation, and much more.


Google Voice Typing Settings



Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input**.
3. Tap  **Settings** next to Google voice typing for options:
 - **Choose input languages:** Select languages for Google voice typing.
 - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
 - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.

Voice Search




Use Google voice recognition to perform Google searches using spoken commands.

To perform a voice search, tap  in the Google search bar or widget. Or say “Ok Google” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input** > **Voice search** for options:
 - Tap **“Ok Google” Detection** to launch a Google search whenever you say “Ok Google.”
 - Additional options include selecting a default language, blocking offensive words, and more.



Text-To-Speech Options

Configure your Text-To-Speech (TTS) options. TTS is used for various accessibility features, such as TalkBack. For more information, see [Accessibility](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input** > **Text-to-speech** for options:
 - Choose either the Samsung or Google text-to-speech engine. Tap  **Settings** next to each TTS engine for options.
 - **Speech rate**: Set the speed at which the text is spoken.
 - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
 - **Default language status**: Display the default language in use.



Mouse/Trackpad Settings

Configure settings for using an optional mouse or trackpad (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Language and input** for options:
 - **Pointer speed**: Set the speed of the pointer.

Voice Control



Use voice commands to control alarms, the camera, or music.

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab > **Voice Control**.
2. Tap the options to to enable:
 - **Alarm:** Stop or snooze alarms with voice commands.
 - **Camera:** Take pictures or record videos with voice commands.
 - **Music:** Control the music app with voice commands.

S Pen Settings



Configure options and settings for the S Pen.

To configure settings for the S Pen:

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **S Pen** to configure the following settings:
 - **Disable pen detection:** Turn off pen detection when the S Pen is attached. This can help extend battery life.
 - **Pointer:** Turn the pointer on or off. The pointer appears on the screen when the tip of the S Pen is hovering close enough. Holding the pointer over some features can reveal what an item is or what it does.
 - **Direct pen input:** Turn the Direct pen input feature on or off. This feature allows you to switch from the keyboard to the S Pen when filling in form fields.
 - **Air view:** Hover the pen over the screen to see more information. See [Air View](#) for more information.
 - **Air command:** When you press the pen button while hovering your pen over the screen the air command features appear. See [Air Command](#) for more information.
 - **Sound and haptic feedback:** Enable sounds and vibrations while writing with the S Pen.
 - **Detachment options:** Select an action for the device to take when the S Pen is detached from the device.
 - **Attach/detach sound:** Select a sound for the device to make when the S Pen is detached from the device.
 - **Attach/detach vibration:** Activate vibration feedback when the S Pen is attached and detached.



Motions

Control certain device actions with specific motions.

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Motions**.
3. Tap **ON/OFF** to enable each of the following:
 - **Zoom:** Press and hold the screen at two points, and then tilt the device back and forth to zoom in or out of the screen.
 - **Browse an image:** Press and hold the screen while zoomed in on a picture, then move the device left, right, up and down to pan.



Palm Motion

Control certain device actions by touching the screen with the palm of your hand.

1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Palm motion**.
3. Tap **ON/OFF** to enable each of the following:
 - **Capture screen:** Take a screen shot by swiping the screen from right to left or vice versa with the side of your hand.
 - **Mute/pause:** Mute or pause sounds by cover the screen with your palm.

Smart Screen

The screen will adjust according to your face orientation.



1. From a Home screen, tap  **Apps** >  **Settings** > **Controls** tab.
2. Tap **Smart screen**.
3. Tap to enable each of the following:
 - **Smart stay:** Screen stays on as long as you are looking at it.
 - **Smart rotation:** Rotate the screen based on the orientation of your face.
 - **Smart pause:** Video will pause when the device detects that you are facing away from the screen.
 - **Smart scroll:** Scroll up or down by tilting your head or device while looking at the screen.

Accounts




Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

Add an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.



Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > (account type).
3. Tap an account to view the sync settings for that account.
 - Check individual data items to sync.
 - Tap  **Sync** to synchronize the account.




Account Settings

Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Note: Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > (account type).
 - Tap an account to configure that account's settings.
 - Tap **Settings** or other available options to configure common settings for all accounts of this type.



Delete an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accounts** > (account type).
3. Tap the account, and then tap  **Delete** > **Remove account**.

Cloud



Back up your personal data using your Samsung Account or Dropbox.

Using Your Samsung Account

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Cloud**.
3. Tap your Samsung account to manage your sync settings and backup options.
 - If you have not signed in to your Samsung Account, tap **Add Samsung account**.
 - Tap **Storage usage** to show the storage used and remaining storage available.
 - Tap **Sync settings** to select which data to sync.
 - Tap **Backup** to manage your back up and restore options.
 - Tap **Restore** to retrieve data from your Samsung account.

Using Your Dropbox Account

For more information about Dropbox, visit dropbox.com.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Cloud**.
3. Tap your Dropbox account to manage your sync settings and backup options.
 - If you have not signed in to your Dropbox account, tap **Link Dropbox account**.
 - Follow the prompts to set up and use Dropbox.

Backup and Reset

Back up your data to Google servers. You can also reset your device to its factory defaults.

Backup and Restore



Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Backup and reset** for options:
 - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
 - **Backup account:** Select a Google account to be used as your backup account.
 - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Factory Data Reset



Return your device to its factory defaults.

Warning! This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Backup and reset** > **Factory data reset**.
3. Tap **Reset device** and follow the prompts to perform the reset.

Collect Diagnostics

This feature collects diagnostic data from your device so that T-Mobile technicians can better troubleshoot issues with your device.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Backup and reset** > **Collect diagnostics**.
3. Tap **Diagnostics** and read the onscreen information. Choose to enable or disable the feature checking **Allow Diagnostics**.

Tap **More info** to display additional information or tap **Next** to display the Issue Assist screen.
4. Tap **Issue Assist** and read the onscreen information. Tap **Accept** or **Decline**.
5. Tap **Special Offers** and read the onscreen information. Tap **Accept** or **Decline**.

Date and Time Settings



By default, your device receives date and time information from the wireless network.

When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Date and time**.
3. Set the date, time, time zone, time format, and date format.

Accessories

Configure options when using HDMI audio devices (not included) or using a book cover (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Accessories** for options:
 - **Dock sound:** Play sounds when inserting and removing device from dock.
 - **Audio output mode:** Use external speakers when device is docked.
 - **Audio output:** Select a sound output format to use when connecting your device to HDMI devices (not included). Some devices may not support the surround sound setting.
 - **Automatic unlock:** Flip the cover open to unlock the screen when secure lock is turned off.
 - **Daynote:** Shows a quick note pad with the date, time, weather, your schedule, and drawings when you open the book cover.
 - **Unit:** Choose between Fahrenheit and Celsius.



Application Manager

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage





See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Application manager**.
2. Tap **DOWNLOADED**, **SD CARD**, **RUNNING**, or **ALL** to display memory usage for that category of applications.

The graph on the DOWNLOADED tab shows used and free device memory. The graph on the RUNNING tab shows used and free RAM.





Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
 - To switch the order of the DOWNLOADED list, tap  **Menu** > **Sort by size** or **Sort by name**.
 - To reset all of your application preferences, tap  **Menu** > **Reset app preferences**.
 - Tap an application to view and update information about the application, including memory usage, default settings, and permissions. The following options are displayed:
 - **Force stop:** Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
 - **Uninstall/Uninstall updates:** Delete the application from the device or uninstall updates made to apps that cannot be deleted.
 - **Move to SD card:** Move this app to your microSD card.
 - **Clear data:** Clear application data from memory.
 - **Clear cache:** Clear an application's temporary memory storage.
 - **Clear defaults:** Clear an application's customization.
 - **Permissions:** View information about the application's access to your device and data.

SD Card



Displays apps you have downloaded onto your memory card (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Application manager**.
2. Tap **SD CARD** to view a list of all the downloaded applications on your SD card.
 - To switch the order of the SD CARD list, tap  **Menu** > **Sort by size** or **Sort by name**.
 - To reset your application preferences, tap  **Menu** > **Reset app preferences**.
3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Note: When you reset app preferences, you will not lose any app data.

Running Services

View and control services running on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Application manager**.
2. Tap **RUNNING** to view a list of running services.



All the applications that are currently running on the device display.
3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.
4. Tap one of the applications to view application information.
 - **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application. (Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.)
 - **Report:** Report failure and other application information.

Note: Options vary by application.

Default Applications

If you have multiple applications of the same type, such as email apps, you can select one app to be the default.

You can also use a simpler Home screen which provides an easier user experience for first-time tablet users.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab > **Default Applications**.
 - Tap **Home** and select a Home screen mode:
 - **TouchWiz easy home**: Provides an easier user experience for the first-time tablet users.
 - Tap **Messages** and select a default messaging app.
 - To clear defaults you have set up, tap **Clear**.

Users




Share this tablet with multiple people by creating User accounts.

Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust settings like Wi-Fi which affect everyone.




Restricted profiles allow only limited access to apps and content.

Set Up User Profiles

Set up user profiles and then select one when unlocking the device to use personalized settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. To add a new user or profile, tap  **Add user or profile**.

Deleting a User or Profile

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. Tap  **Delete** next to a User profile to delete it.

Note: Only the Device Owner can delete other User accounts.

Use User Profiles

To access the device with a user profile, select a profile at the top right of the locked screen.



You can also switch between users when logged in as a secondary user by sliding down the Notification Panel and tapping the current User. For more information, see [Notification Panel](#).




Change User Account Nicknames and Photo IDs

The photo and name each user uses in their personal Contact entry (listed under ME at the top of their Contacts list) is used as their User ID and name.

To change their ID photo and name, each user can edit their personal Contact entry. For more information, see [Edit a Contact](#).

Battery

View how battery power is used for device activities.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Battery** for options:
 - **Show battery percentage:** Display the battery charge percentage next to the battery icon on the Status bar.
 - **Battery Chart:** The battery level displays as a percentage. The amount of time the battery has been used also displays. Tap the chart to view history details.
 - **Apps and OS Usage:** Battery usage displays in percentages per application.
3. Tap **Screen**, **Android System**, **Android OS**, or an app to view how they are affecting battery use.
4. Tap  **Refresh** to update the listing.

Note: Other applications may be running that affect battery use.

Power Saving

Conserve battery power by automatically adjusting the screen brightness, limiting the performance of the CPU, and other power reduction activities.

Ultra power saving mode saves even more battery power by using a gray scale theme on the Home screen and limiting the number of usable apps.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **ON/OFF** to turn the feature on. Tap **Power saving mode** to select options.



Tip: Tap **Learn about power saving** to display more information about conserving power.

Storage


View the device memory and usage, or mount, unmount, or format an optional memory card (not included).

Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage**.
 - The *Device memory* displays Total space and Available space.
 - The amounts of memory used by Applications, Pictures and videos, Audio, Downloads, Cached data, and Miscellaneous files are also displayed.

To increase available memory:

 
1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **Select all**), and then tap  **Delete**.

Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory displays as Total space and Available space.

Install a Memory Card

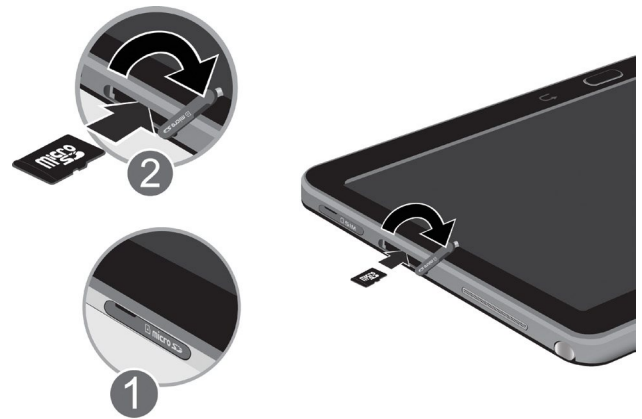

You can use an optional microSD or microSDHC card (not included) to add additional memory space to your device.



1. Open the microSD card slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Close the microSD card slot cover.

Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Mount SD card**.

Unmount an SD Card



To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Unmounting an SD card may stop some applications from functioning until you mount the SD card again.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Unmount SD card**.

Remove a Memory Card

Warning! To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Unmount SD card**.
3. Open the memory card slot cover and turn to expose the slot.
4. Gently press inward on the memory card so that it pops out from the slot, and carefully pull the card out.
5. Close the memory card slot cover.

Formatting an SD Card

Warning! When formatting an SD card, you should backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.



1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Storage** > **Format SD card** and follow the prompts.

Security

Secure your device and protect your data with Security settings.

Device Administration



Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
 - **Device administrators:** Add or remove device administrators.
 - **Unknown sources:** Enable installation of non-Google Play applications.
 - **Verify apps:** Block or warn before installing apps that may cause harm.

Warning! Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.



Encrypt Your Data

Require a numeric PIN or password to decrypt your device each time you power it on or encrypt the data on a memory card (not included) each time it is connected.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
 - Tap **Encrypt device** and follow the prompts to encrypt all data on your device.
 - Tap **Encrypt external SD card** to encrypt data on a memory card (not included).



Set Up or Change Your SIM Card Lock

Use this option to set up your password when one is first required or change your current password.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Set up SIM card lock** and follow the prompts.



View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** > **Make passwords visible** to turn the feature on.



Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
 - **Security policy updates:** Automatically or manually check for security policy updates.
 - **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.



Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **Security** for options:
 - **Storage type:** Select a storage location for credential contents.
 - **Trusted credentials:** Display certificates in your device's ROM and other certificates you have installed.
 - **Install from device storage:** Install a new certificate from storage.
 - **Clear credentials:** Erase the credential contents from the device and reset the password.



About Your Device

View information about your device, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **About device**, and then tap items for more details:
 - **Status:** View the status of the battery, network, and other information about your device.
 - **Legal information:** View your device's open source licenses and Google legal information.
 - **Device name:** View and change your device's name.
 - Additional device information includes the Model number, Android version, Build number, and more.

Software Update

Use Software update to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings** > **General** tab.
2. Tap **About device** > **Software updates**.
3. Follow the prompts to check for available software updates to download and install.